

BMW Billet Oil Filter Housing Fitting Instructions

Tools needed:

- BMW Oil filter removal tool
- Torque Wrench
- 32mm Socket

Kit Includes:

- AIRTEC Billet Oil Filter Housing

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT



Instructions:

1. Start by removing the stock filter housing, in order to remove the housing you will need to use a BMW oil filter removal tool. Once the filter has emerged from the housing oil will leak out so make sure to have some paper towel at the ready to catch the unwanted oil.



2. After removing the oil filter housing, you can remove the filter and then remove the insert which holds the filter in place. Simply twist the insert then pull it away from the housing.



3. Now install the insert into your new AIRTEC billet filter housing by pushing it down and clicking it in place. Then remove the stock O ring from the original filter housing and install it onto the new housing with your oil filter as shown below.



4. Finally tighten the housing back in place using a 32mm socket and torque it to 25nm.

