


Mini F56 induction kit fitting guide.




1. Remove air feed by undoing 2x 10mm nuts and unclipping from airbox

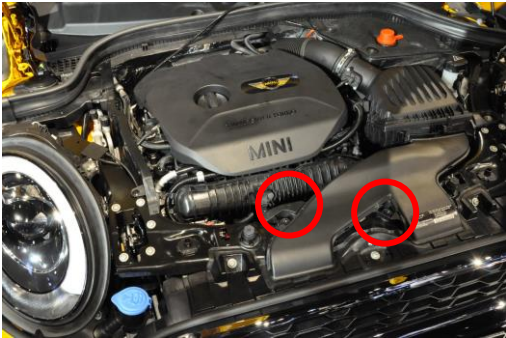

2. Unplug MAF sensor and also unclip breather pipe



3. Remove standard airbox and induction hose, airbox is held in by 1x 10mm bolt securing to inner wing and 2 push fit fittings

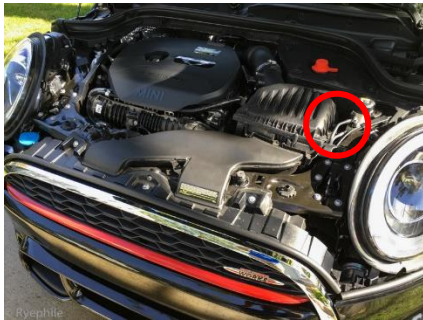

4. With standard airbox removed, time to fit your new AIRTEC induction kit.
5. Induction fits to all original fixing points, comes supplied with new brackets and locating tabs.
6. Remove MAF sensor from original airbox lid and fit to new MAF pipe
7. Fit silicone elbow to intake pipe and fit air filter to MAF pipe
8. Check for clearance, once happy tighten jubilee clips and induction shield bolt
9. Re-fit plastic cold air feed

