

AIRTEC Motorsport induction kit for Golf R MK7 fitting guide.



Tools needed:

- Jubilee driver
- 10mm socket
- 4mm & 5mm Allen key sockets
- 7mm socket
- Selection of extension bars
- Ratchet

Fitting kit:

- 1x M6 X 12 socket head
- 1x M6 X 50 socket head
- 1x M6 small mudguard washer
- 1x M6 pan washer
- 2x M4 X 12 socket head
- 4x M4 washers
- 2x M4 Nylocks
- Filter securing bracket
- Hard pipe
- Shield
- Filter

1. Remove standard intake hose securing clip and remove hose




2. Remove vac pipe from airbox



3. Unclip airbox from 3 rubber mounting bushes + remove



4. Remove 10mm bolt at front of

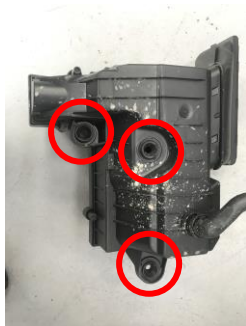

5. Locate new induction shield into place and bolt to battery tray using supplied M6 X 50 socket head & mudguard washer




6. Fit vacuum pipe + supplied bracket to AIRTEC intake pipe, loosely bolt to induction shield with supplied nuts and bolts



7. Fit AIRTEC air filter to induction pipe.

NOTE: DO NOT PUSH AIR FILTER ANY FURTHER THAN SWAGE LINE, IF FILTER IS FITTED ANY FURTHER IT WILL CHANGE THE ANGLE AND FILTER WILL RUB ON AIR INTAKE, VOIDING WARRANTY.

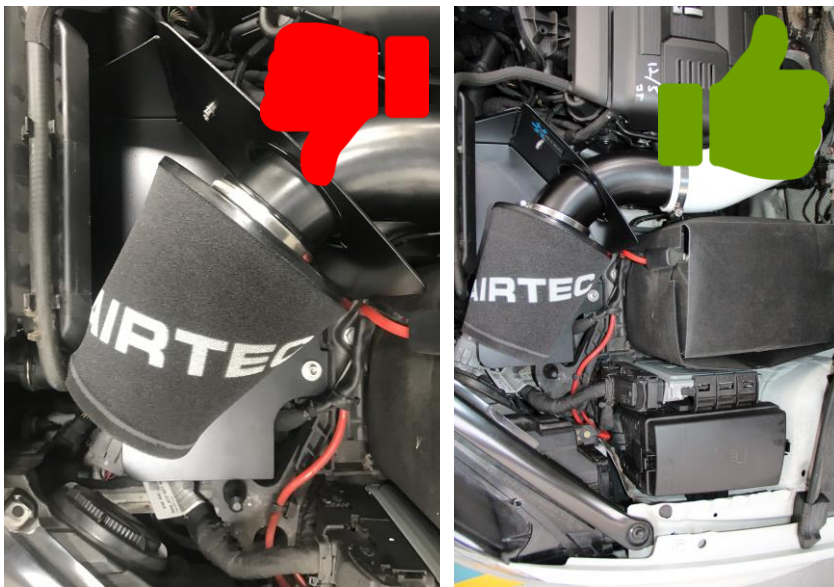

8. Refit standard or uprated pro hose intake hose in the reverse order.