


## AIRTEC Focus ST MK3 Diesel Intercooler fitting instructions

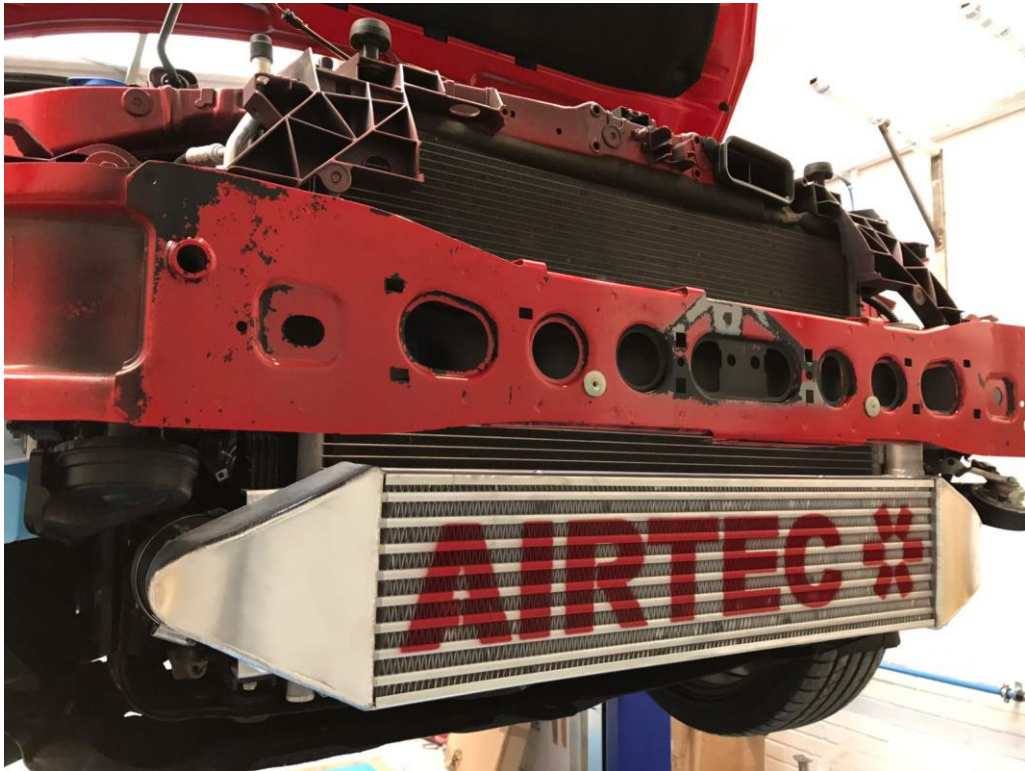

### Fitting kit:

2x M6 x 20 Socket head

2x M6 nylock

4x M6 x 20 mudguard washer

1. Remove headlights. 2x T27 torx



2. Undo top of bumper. 5x T27 torx and 2x push fit fitting.
3. Undo inner arches from bumper 2x T27 torx and 1 push fit fitting.



4. Undo bottom of bumper 3x T27 torx and 4x push fits.
  5. Unclip sides of bumper + remove bumper. Be sure to unclip fog light loom.
- Store bumper in a safe place to prevent damage.



6. Remove radiator air shutters, this is optional to allow yourself a bit more room.

**7. Remove standard intercooler by undoing 2x8mm bolts**



**8. Fit Airtec intercooler as OE with supplied fixings & bolts.**



**9. Re-fit air shutters if removed**



**10. Re-fit bumper following instructions in reverse.**