

**Mazda 3 MPS top mount intercooler fitting instructions.**  
**Please note, MK1 / MK2 use the same fitting instructions.**



**Tools Required:**

**10mm, 12mm, 13mm sockets**  
**Ratchet and selection of extensions**

- 1. Remove plastic intercooler cover 2x M6 bolts**



- 2. Undo both jubilee clips securing boost pipes**




**3. Remove 2x 10mm bolts securing standard BOV**



**4. Remove 3x 13mm nuts securing intercooler**



**5. With intercooler removed, swap induction elbow including gasket from standard to AIRTEC**

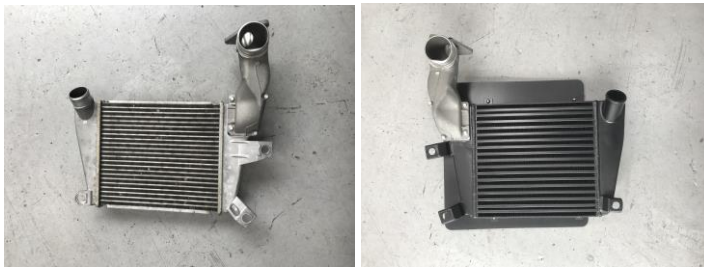

**6. Fit new AIRTEC intercooler using original rubber bushes and 13mm nuts**



**7. Refit boost pipes and BOV following instructions in reverse.**