



Citreon DS3 Intercooler Fitting Instructions



Kit includes:

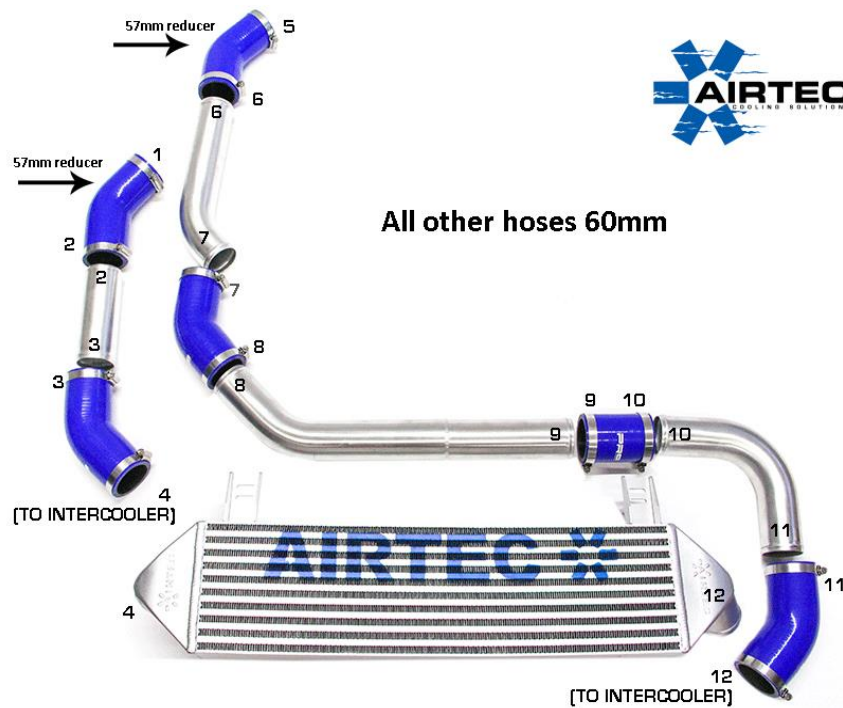

1. Undo 4x T20 Torx securing top of bumper.

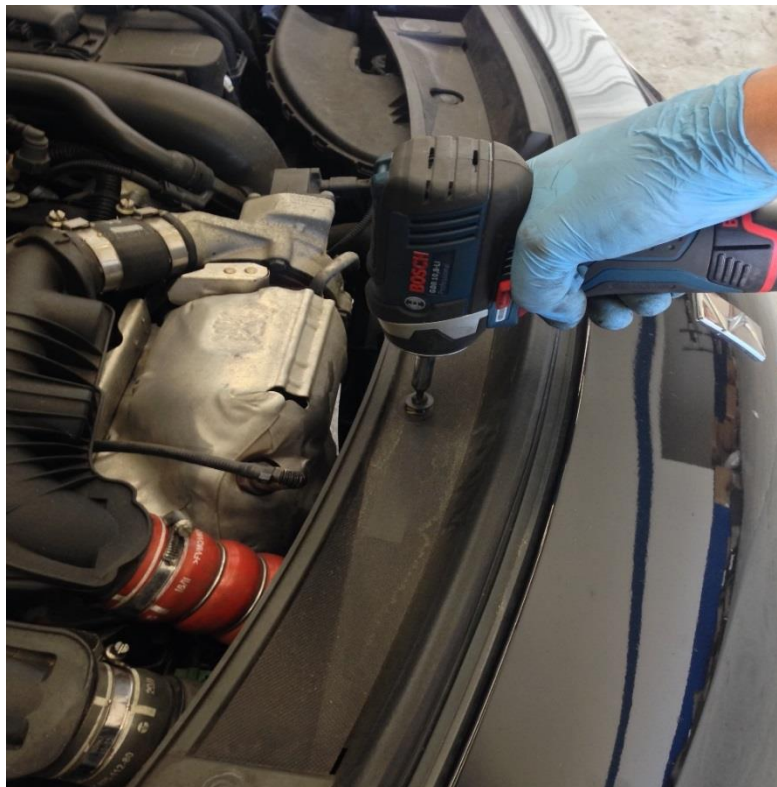

2. Undo T20 Torx and plastic clips securing inner arch to bumper.




3. Undo 2x 10mm bolts holding bumper to front arch and gently pull the bumper to unclip.



4. Remove bumper making sure to unclip fog lights.




5. Remove standard intercooler by removing front crash bar and unhooking radiator surround to allow room for the standard cooler to be removed.
6. Once standard cooler is out replace radiator surround and crash bar.

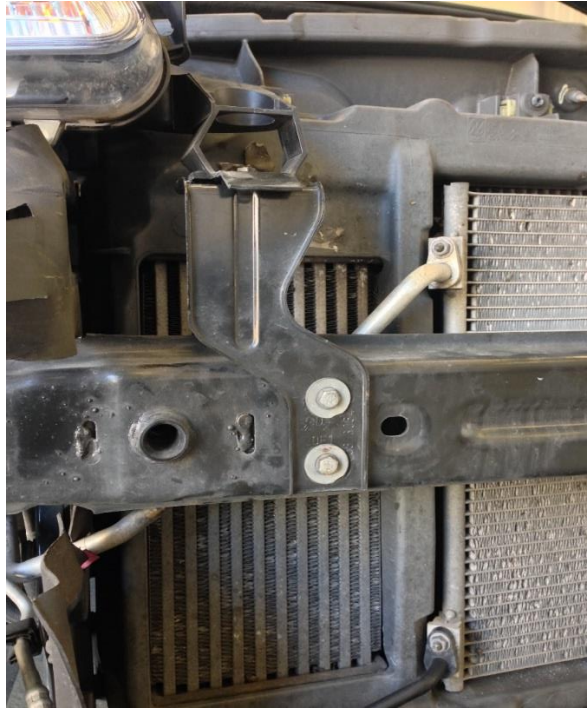

7. Fix intercooler into place with the original bolts



- Loosely fit in place the pipework making sure the 57mm ends go onto the top engine pipework. Once happy tighten jubilee clips.

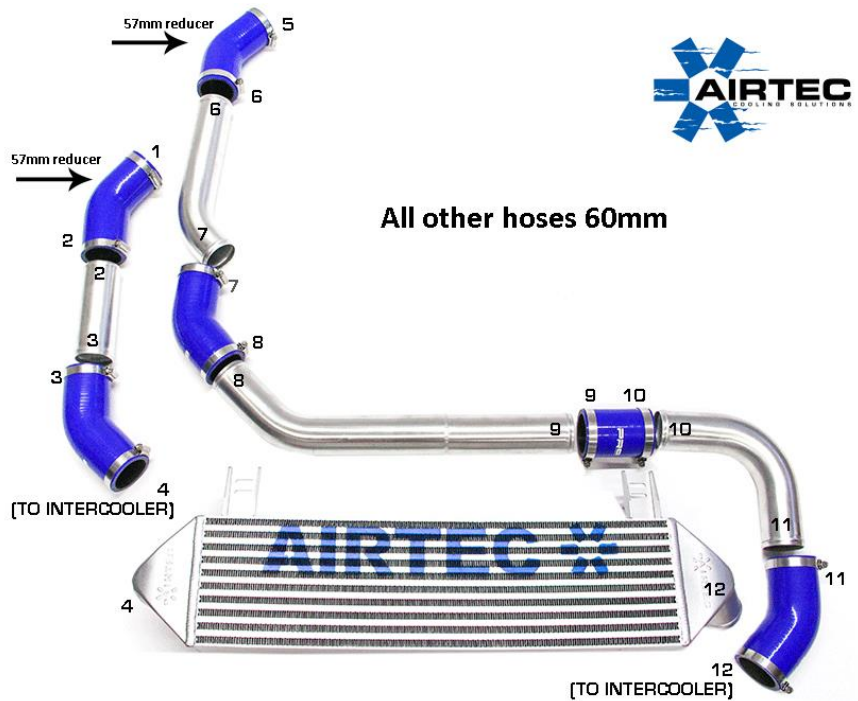

- Fit bumper in reverse order of removal

**THANK YOU FOR JOINING
THE COOLING REVOLUTION...**