

## AIRTEC intercooler fitting instructions for Audi RS3 8P



### **Tools needed:**

**T27 & T20 torx sockets**

**Ratchet**

**Selection of extension bars**

**Phillips & flat blade screw drivers**

**Dremel with cutting disc**

### **Fitting Kit:**

**2X M8 X 16 Socket with pan washer**

**2x Bottom brackets (Sided, uses standard fittings)**

1. Undo 3x t27 torx securing top of bumper



2. Remove lower section of inner arch 8 x t20 torx




3. Undo 1x T20 torx securing bumper to arch



4. Undo 10mm bolt securing bumper to wing



5. Undo 3x T20 torx securing bottom of bumper

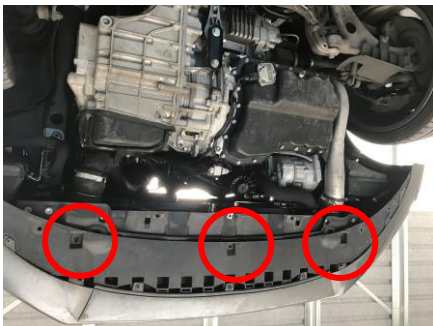

6. Unclip sides of bumper from wing



7. Remove bumper and store in a safe place to prevent damage



8. Remove standard intercooler undo both boost pipes 10mm bolt each side securing to crash bar and T27 torx securing bottom brackets



9. Remove headlights 3X T27 Torx & 2x T27 torx securing headlight washer housing



10. Remove standard crash bar 4x 13mm bolts



11. Fit new AIRTEC intercooler & modified crash bar into place with supplied lower brackets.

**PLEASE NOTE: Brackets are sided – Radiator cowling may need trimming**



12. Before re-fitting bumper, lower section of grill will need minor trimming to fit



13. Refit bumper and check clearance between grill and cooler, following instructions in reverse.

