

Audi A4/A5 intercooler fitting instructions.



Access to a vehicle lift or floor jack and axle stands.

Philips screwdrivers.

T20 & T25 Torxs Driver.

10mm socket, extension bar & ratchet.

7mm hose clamp driver.


7mm drill bit & suitable drill.

Safety eyewear, footwear, gloves and protective clothing are also recommended.

1. Remove 4x T20 Torx holding the wheel arch liner to bumper.



2. Remove Philips screws holding bottom of bumper.

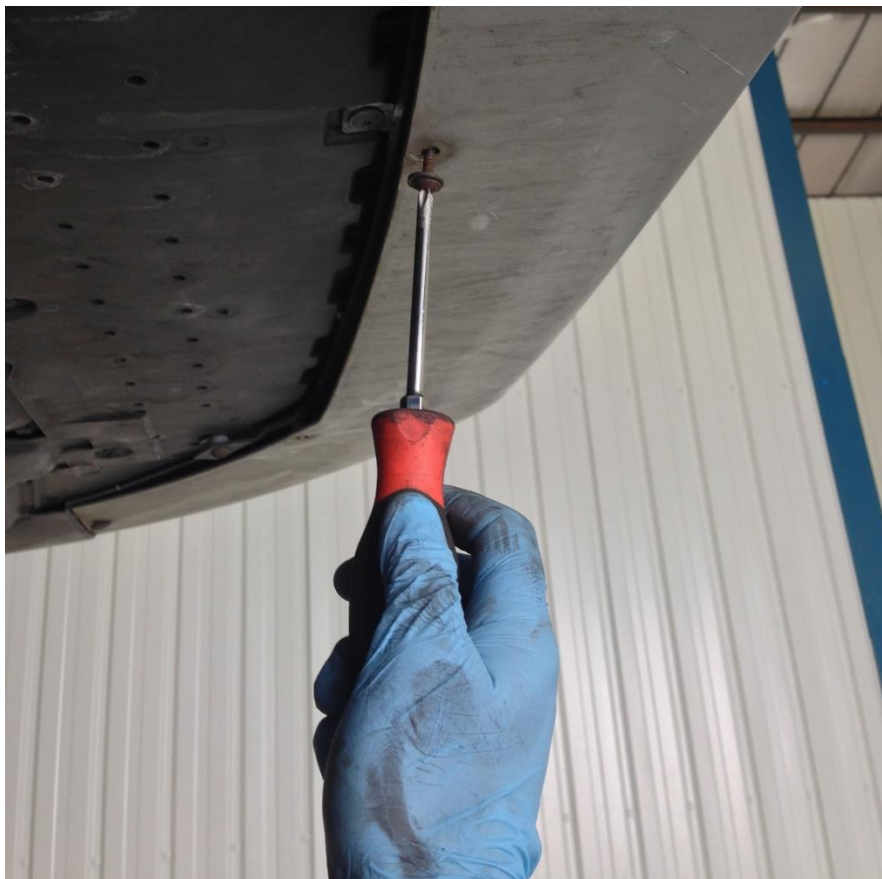

3. Remove bottom engine shield.

4. Undo 10mm bolt holding bumper to wing.

5. Undo 4 x T25 Torx holding front scuttle.



6. Undo 2x T20 Torx holding top of bumper.



7. Give bumper a gentle pull to remove from wings.



8. Undo boost pipes.


9. Undo t25 Torx holding intercooler and unclip both sides tilt cooler forward and slide cooler up to remove.



10. Fit silicone hoses provided and hook intercooler into position onto the original mounts, install top intercooler support bracket, mark and drill two 7mm holes and secure with fixings provided.



11. Re – install bumper onto the car following instructions in reverse.

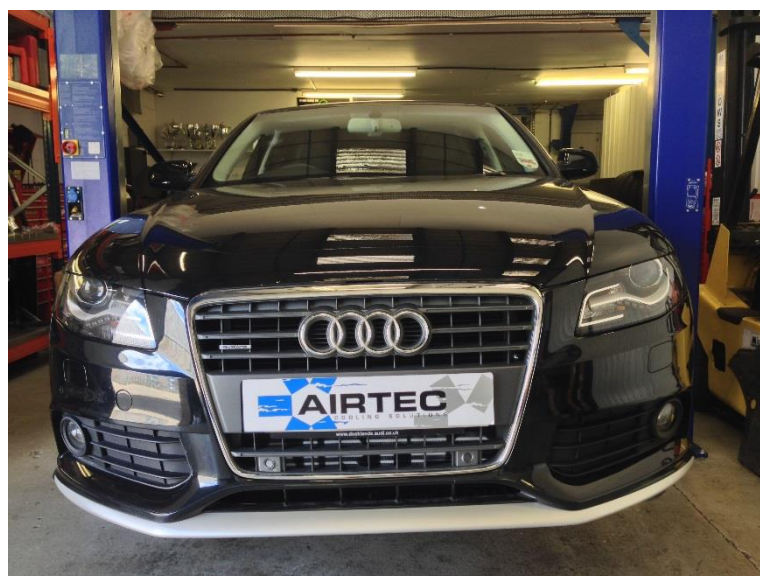

**THANK YOU FOR JOINING
THE COOLING REVOLUTION...**