


# Fiesta MK7 1.6 ST Eco Boost boost gauge kit fitting guide

1. Remove standard MAP sensor & fit new adaptor plate and re-fit map sensor as pictured

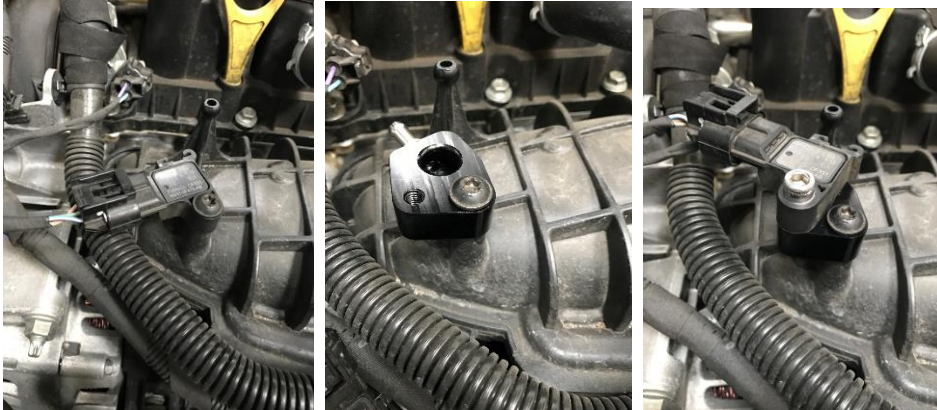


2. Remove rubber grommet in bulk head above accelerator pedal, insert hole in grommet for vac pipe



3. Remove heater vent, unclip silver surround and fit boost gauge blanking plate and re-clip silver surround on. Now fit your boost gauge and clamp into place. Fit vac pipe onto take off




4. Route vac pipe through bulk head grommet and secure onto map sensor take off plate

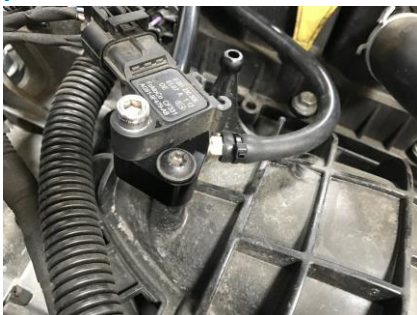

5. To illuminate your boost gauge earth to chassis



6. For power use ignition live on back of headlight switch

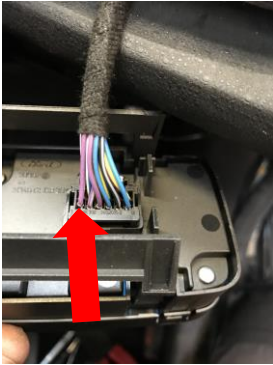

7. Go boosting!