


Fiesta MK6 ST150 Power steering relocation kit



1. Remove the original power steering reservoir held in with 3 x 8mm bolts
2. Fit the adaptor for the steering fluid to the block with the supplied counter sunk bolts
3. Fit the large hose to the take-off from the block (the angle end of the hose)

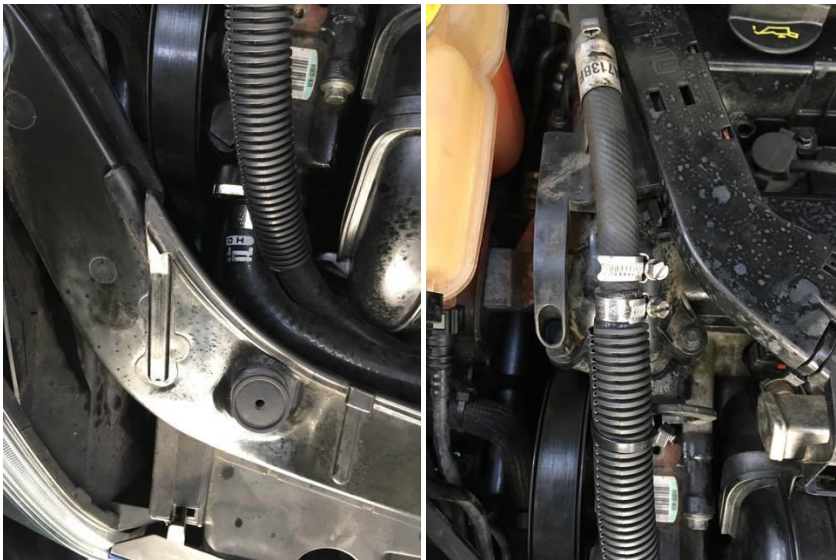

4. Join the small PAS hose provided with the alloy joiner 'as shown above' ensure both hoses are secured with cable ties to prevent anything rubbing them or damaging them.

5. Remove the battery and battery tray
6. Place the power steering fluid reservoir in place as shown in picture, mark holes to drill for the power steering securing bolts



7. Drill the 2 holes with a 5mm drill bit
8. Fit both hoses to the PAS reservoir and then secure to the battery tray. **(HOSES MAY NEED SOME CUTTING DOWN)**
9. Refit battery tray & refit battery
10. Fill the new PAS with fluid and bleed the system