

Focus 1.0 Induction kit fitting instructions




1. Remove sensor from original airbox by twisting and pulling upwards and undo induction hose onto airbox



2. Remove airbox (Remove push fit from side of airbox) – pull upwards, also remove rubber intake snorkel



3. Disconnect bonnet catch cable from latch and feed through new shield at the same time install shield into rear locating grommet. Install securing bracket provided onto shield then onto bonnet catch. You'll have to remove 10mm bolt to secure.

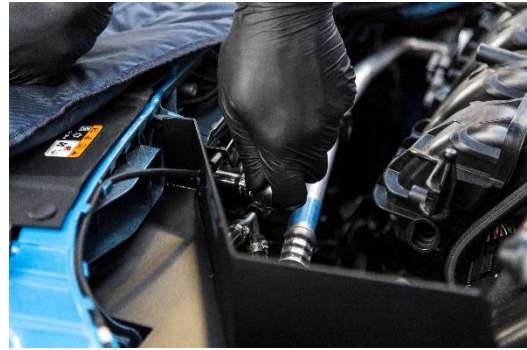

4. Feed new pipe with air filter connected through shield and connect to induction hose then install your original sensor with bolt and washer supplied

