

AIRTEC Intercooler for BMW M2 fitting instructions



Tools required:

Access to a vehicle ramp or jack and axle stands.

1x Flat head screw driver

1x T20 torx driver

Kit includes:

1x AIRTEC intercooler

1. Raise car on jack and axle stands, or on a vehicle lift.




2. Remove the front under tray by removing 20x 8mm bolts. Place under tray in a safe place to prevent damage.



3. Pop securing clips of the boost pipe by using a flat head screwdriver to remove.



4. Remove 2x T25 bolts securing intercooler into place. Please be aware that this is tight on the plastic air duct, advice trimming the back of air duct.

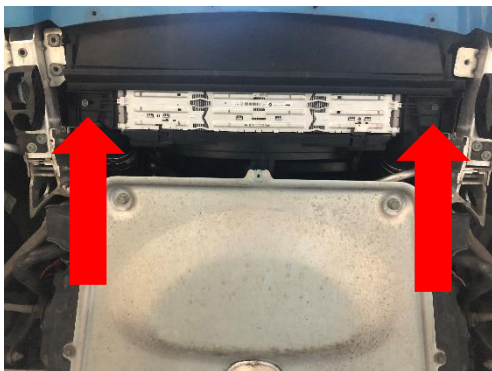

5. Carefully pull down the plastic air guide (this is flexible, be careful not to break). Tilt the intercooler towards the front of the car and carefully remove, making sure the boost pipes aren't attached.



6. Offer the AIRTEC intercooler into place, using the standard intercooler location as a guide. Please make sure to hold back the air guide out of the way to allow as much room as possible, fitting is tight. Tilt the top of the intercooler towards the front of the car, once past the radiator support use the locators on the side of the intercooler to fit into place.



7. Once in position, clip original boost pipes back onto the intercooler and secure intercooler using the stock bolts, fit under tray back on.

