

# Peugeot 207 GTI V.2 Intercooler Fitting Instructions.



**1x Airtec intercooler**

**2x Alloy pipe joiners**

**1x 50mm 45degree silicone**

**1x 50mm silicone joiner**


**2x 50mm – 57mm 45 degree silicone reducers**

**6x 60mm jubilee clips**

**2x 70mm jubilee clips**

**4x self-tapping bolt**


1. Undo 4x T20 Torx securing top of bumper.

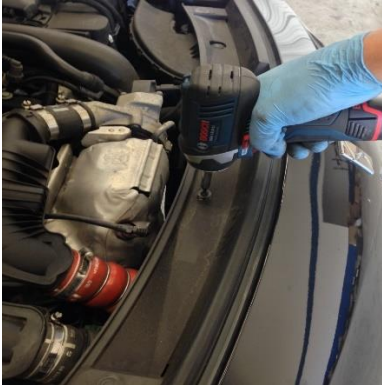

2. Undo T20 Torx and plastic clips securing inner arch to bumper.



3. Undo 2x 10mm bolts holding bumper to front arch and gently pull the bumper to unclip.

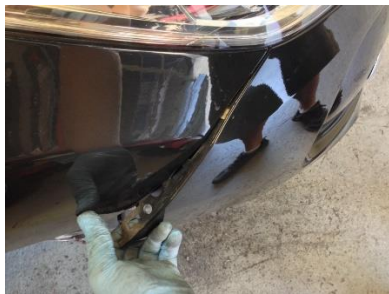

4. Remove bumper making sure to unclip fog lights.




5. Remove standard intercooler by removing front crash bar and unhooking radiator surround to allow room for the standard cooler to be removed.
6. Once standard cooler is out replace radiator surround and crash bar.



7. Offer airtec intercooler into place, when happy with clearance bolt to radiator front panel with supplied self-tapping bolts



8. Fit pipework as numbered in diagram

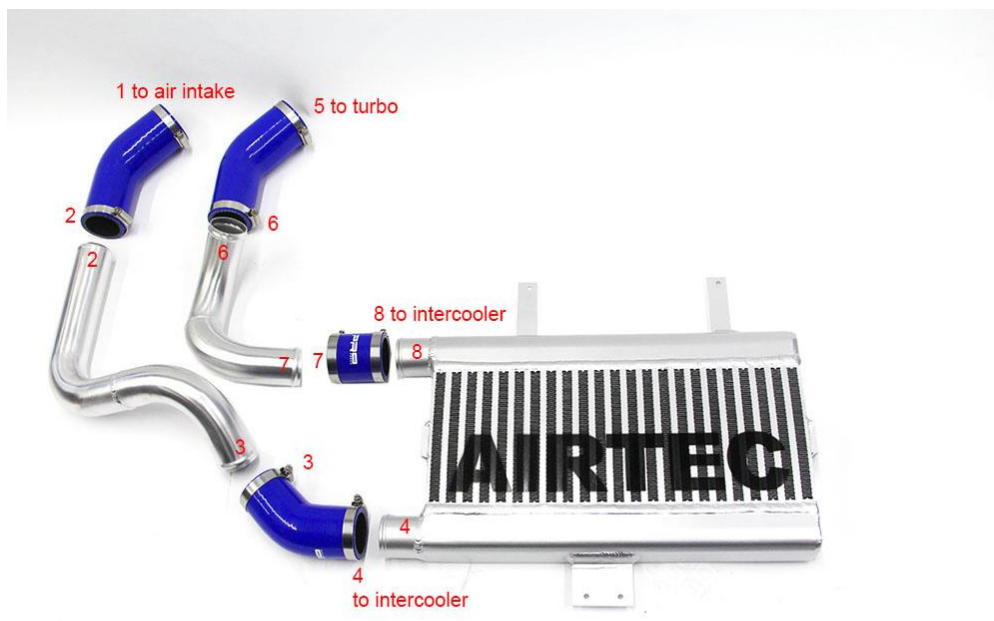

9. When happy with clearance, tighten all jubilee clips



10. Refit bumper following instructions in reverse



**THANK YOU FOR JOINING  
THE COOLING REVOLUTION...**