

# Peugeot RCZ 1.6 156BHP AIRTEC intercooler fitting instructions



## Fitting kit:

- 1x M6 X12 Socket Head
- 1x M6 Small mudguard washer
- 2x 10mm self-tapper bolts

## Tools required:

- T20 & T25 torx sockets
- 8mm & 10mm sockets
- Ratchet and selection of extensions
- Jubilee driver
- Trim pad removal tool
- Drill
- 4mm drill bit

1. Undo top of bumper consisting of 2x T20 torx bolts & 4 plastic push fit fittings



2. Undo 3x 8mm bolts securing top of bumper to wing



3. Remove 3x plastic push fit fittings on inner arch to bumper



4. Remove lower bumper tray 3x 10mm bolts & 2x T20 torx sockets




5. Unclip sides of bumper and remove making sure to unclip fog lights and crash sensor clip.



**6. Remove standard boost pipes**



**7. Remove standard intercooler, undo 2x 10mm bolts & lift out intercooler through top of engine bay, please be aware air con pipe is very tight against intercooler**

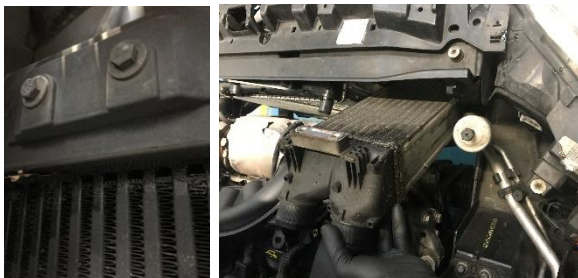

**Now its time to fit your airtec intercooler!**

**8. Line up intercooler against crash bar, mark holes on securing bracket and drill, secure intercooler with supplied self-tapping bolts**



9. Loosely fit boost pipes as pictured making sure bottom boost pipe is clear of cooling fan



10. Once happy with clearance, tighten bottom boost pipe to intercooler and all jubilee clips



11. Please note trimming is required to N/S radiator shroud



12. Back of bumper grill slight trimming is required to clear intercooler



13. Refit bumper following instructions in reverse