

# AIRTEC Renault 250/265 Intercooler fitting



1. Remove 6 x T20 screws securing plastic top panel



2. Remove 2 x T20 screws from inner wheel arch liner, also remove the x 5 plastic clips to enable more room to remove bumper



3. Remove 2 x T30 screws securing bumper to wing '1 x each side', then remove x 7 10mm bolts securing bottom of bumper



4. Unclip bumper each side



5. Remove bumper carefully and unclip loom multi-plug and block off washer pump with silicon pipe provided



6. Un-clip the Air scoops, un-clip loom across crash bar



7. Undo 10mm bolt that secures headlight to crash bar and loosen off 16mm bolts for crash bar




8. Un-clip intercooler on drivers side and slide cooler across



9. Un-clip intercooler pipes + remove cooler. Tip, remove 10mm bolt located @ top of drivers side boost pipe



10. Install the intercooler by fitting the N/S first, clip boost pipes on and secure with fittings provided, replace parts in reverse order of removal

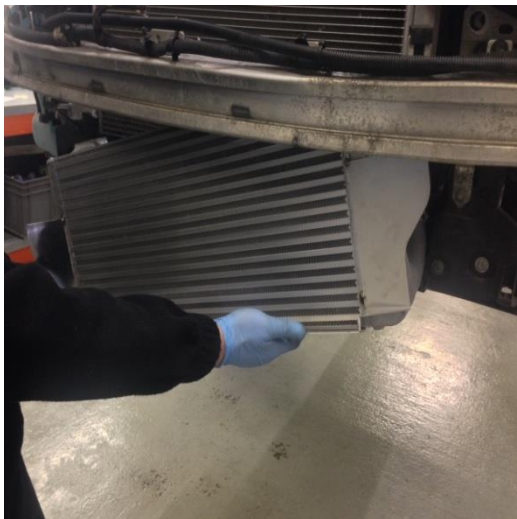

11. If you require and additional help please call AIRTEC technical on +44 1375 386878



**Thank you joining the cooling revolution!**