

AIRTEC Renault 250/265 Intercooler fitting



Tools Required:

Access to a vehicle lift or floor jack and axle stands.

Drill.

3mm drill bit.

7mm hose clamp driver.

T30 Torx socket.

Ratchet and extensions.

Cross head screw driver.

Dremel or similar tool for trimming lower grill if needed.

Safety eyewear, footwear, gloves and protective clothing are also recommended.

1. Remove 6 x T20 screws securing plastic top panel



2. Remove 2 x T20 screws from inner wheel arch liner, also remove the x 5 plastic clips to enable more room to remove bumper



3. Remove 2 x T30 screws securing bumper to wing '1 x each side', then remove x 7 10mm bolts securing bottom of bumper



4. Unclip bumper each side



5. Remove bumper carefully and unclip loom multi-plug and block off washer pump with silicon pipe provided



6. Un-clip the Air scoops, un-clip loom across crash bar



7. Undo 10mm bolt that secures headlight to crash bar and loosen off 16mm bolts for crash bar




8. Un-clip intercooler on drivers side and slide cooler across



9. Un-clip intercooler pipes + remove cooler. Tip, remove 10mm bolt located @ top of drivers side boost pipe



10. Install the intercooler by fitting the N/S first. Clip boost pipes on and secure with fittings provided onto OEM mounting points as shown in photo below:

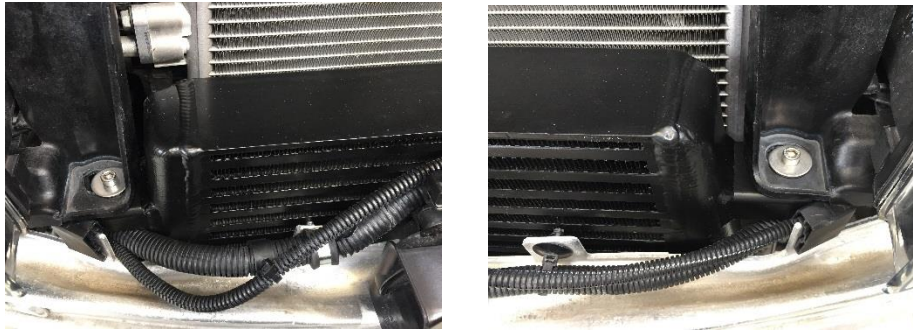


11. Please cut left and right hand air guides as shown in picture below:



12. **IMPORTANT INFORMATION:**

Brackets & horn position must be fitted as per pictured below. Intercooler will not fit unless fitted as shown.

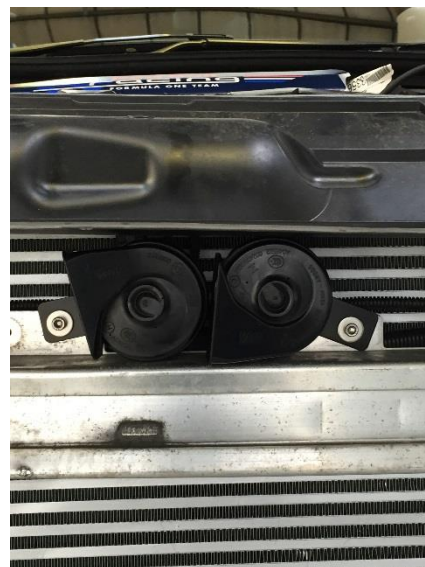

13. If you require any additional help please call AIRTEC technical on +44 1375 371449

**THANK YOU FOR JOINING
THE COOLING REVOLUTION...**