

## VW Scirocco 140 CR Diesel intercooler fitting instructions.



1. Raise car up using a jack or axle stands, access to a vehicle ramp would benefit.
2. Remove under tray.



3. Remove 4 screws from wheel arch.



4. Remove 1x T27 from each inner arch to bumper.



5. Remove 4 T27 from bumper to engine bay.




**6. Remove bumper and disconnect fog lights & side lights.**



**7. Remove poly from slam panel & air guides from rad pack (Remove air sensors from N/S scoop).**



**8. Undo standard boost pipes from cooler & remove.**

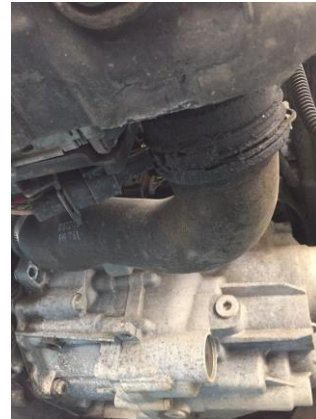


**9. Cut two locating legs off slam panel.**



**10. Offer up new cooler, mark two points for mounting brackets & drill 6mm whole.**



**11. Mount cooler & offer up pro silicon hoses.**

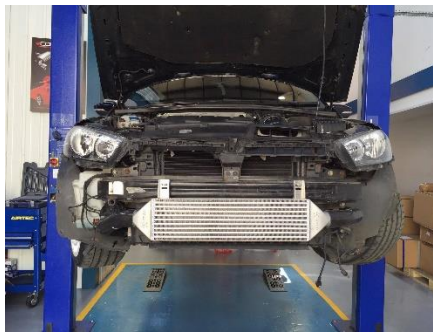

**12. O/S horn bracket will need to be bent upwards slightly, the 13mm nut can then be loosened and horn twisted to allow clearance.**



**13. Tighten silicon hoses.**





14. Refit bumper following instructions in reverse.

**Please note:** when connecting side light & fog lights on the driver's side, the wiring will need to go over the new silicone hose **NOT** under.



**THANK YOU FOR JOINING  
THE COOLING REVOLUTION...**