

VW Caddy Diesel intercooler fitting instructions.



Please note: Fitting may be slightly different, images from the Scirocco CR140

1. Raise car up using a jack or axle stands, access to a vehicle ramp would benefit.
2. Remove under tray.



3. Remove 4 screws from wheel arch.



4. Remove 1x T27 from each inner arch to bumper.



5. Remove 4 T27 from bumper to engine bay.




6. Remove bumper and disconnect fog lights & side lights.



7. Remove poly from slam panel & air guides from rad pack (Remove air sensors from N/S scoop).



8. Undo standard boost pipes from cooler & remove.

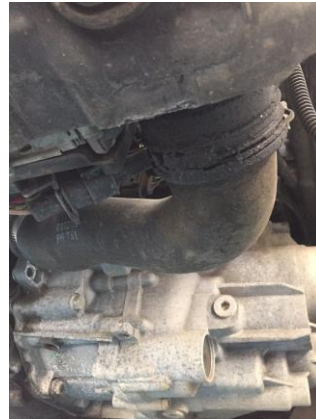


9. Cut two locating legs off slam panel.



10. Offer up new cooler, mark two points for mounting brackets & drill 6mm whole.



11. Mount cooler & offer up pro silicon hoses.

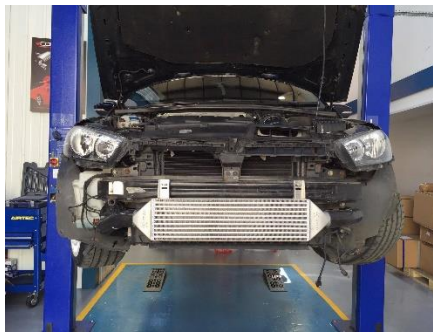

12. O/S horn bracket will need to be bent upwards slightly, the 13mm nut can then be loosened and horn twisted to allow clearance.



13. Tighten silicon hoses.



14. Refit bumper following instructions in reverse.

Please note: when connecting side light & fog lights on the driver's side, the wiring will need to go over the new silicone hose **NOT** under.



**THANK YOU FOR JOINING
THE COOLING REVOLUTION...**