

# Honda Civic Type R Torque Mount Fitting Instructions

## Tools needed:

- 17mm Socket
- 19mm Socket /Spanner
- 10mm Socket
- Ratchet
- Trim Tool

## Kit Includes:

- AIRTEC Torque Mount
- Powerflex Bushing

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT




## Instructions:


1. Remove all bolts and clips securing the under tray in place using a trim tool and 10mm socket, once all fixings have been removed you can then remove the under tray.




2. You will now be able to access the stock mount, start removing the mount by removing the 17mm bolt securing the mount to the subframe.

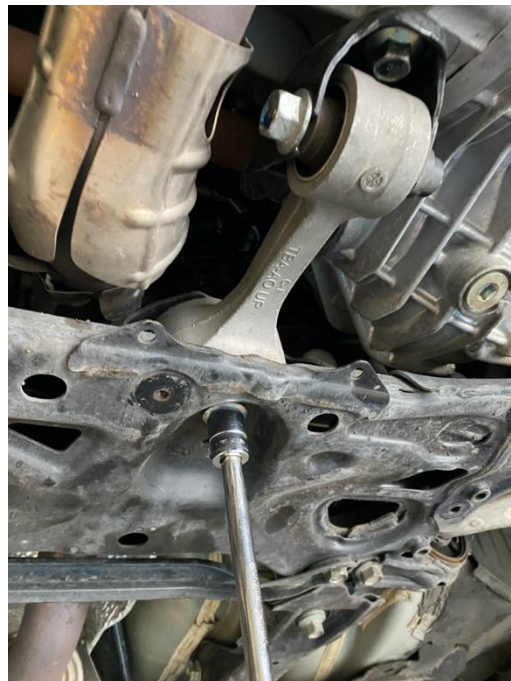

3. Remove the 19mm bolt securing the lower mount to the bracket.

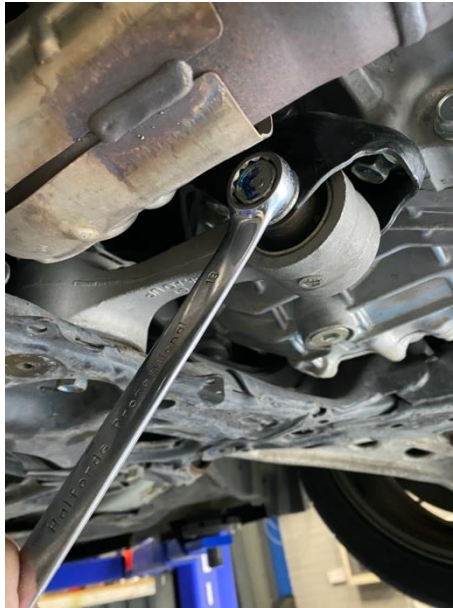


4. You can now remove the mount by rocking the engine forward as this will allow the mount to have enough movement to remove from its location.

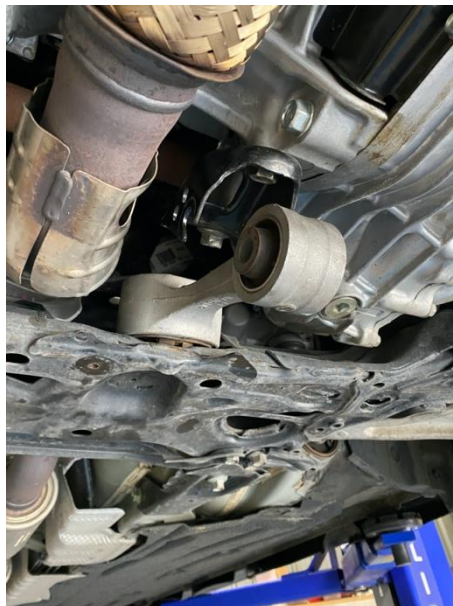

5. Remove the lower mount bracket by removing x2 17mm bolts securing the bracket in place.



6. Install your new AIRTEC torque mount by rocking the engine forward again then reinstall the bracket when in position.

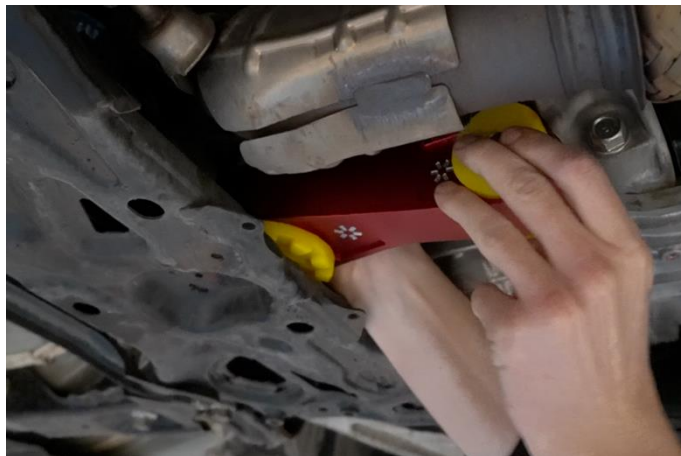

7. Now re install the 17mm and 18mm bolt in reverse of removal and refit the undertray.

