


Airtec Motorsport Quick shift conversion for MK2 Focus St & RS Fitting guide

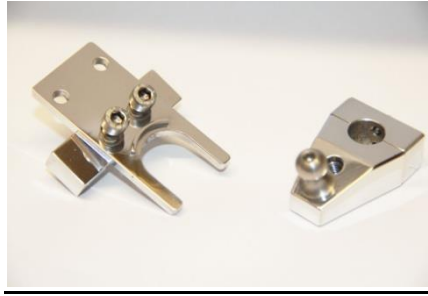

Tools required. Allen keys and Flat bladed screw driver

1. Unclip gear lever gaiter plastic surround up from the rear, and then lift upwards as shown.



2. Use flat bladed screw driver to un-clip gear lever cable



3. Install the 2 piece cable mount onto the lever as low as it will go & then fully tighten the Large Allen keys bolts, then the 2 small bolts



4. Un-clip the cable from the securing mount as shown, you need to push the spring tensioned white part of the clip backwards to release.



5. Take the 2 alloy parts as shown (Raised half moon section will be on reverse of the folk), leave a 5mm gap in-between them, Install where the you un-clip the cable from, then using Allen key tighten fully



6. Clip cable back in as reverse of removal and then clip end of the cable onto ball end, make sure you have tightened everything before replacing the gear lever surround



You're now finished installing your new quick shift conversion, if you require addition help or information call us on 01375 371449 and ask for technical. Thank you for choosing AutoSpecialists