

Renault Megane Mk3 250 Lower Engine Mount Fitting Instructions

Tools needed:

- Lifting equipment
- 21mm Socket
- 16mm Socket
- Ratchet

Kit Includes:

- AIRTEC Billet Engine Mount (inserts included)

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT



AIRTEC 
MOTORSPORT

AIRTEC 
MOTORSPORT

Instructions:


1. Start by safely lifting the car so you can access underneath. Then remove the 21mm bolt securing the lower engine mount to the chassis.



2. Now remove the second 21mm bolt going from the mount to the bracket secured to the engine.



3. In order to remove the original engine mount, you will need to remove the bracket from the engine by removing the three 16mm bolts holding it in place.

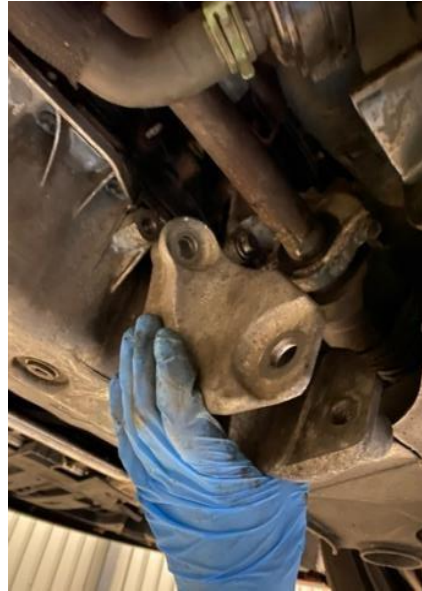

4. Now you can install your new AIRTEC Motorsport lower engine mount by sliding the mount into position and then reinstalling the 21mm bolt - **but do not fully tighten yet.**



5. Reinstall the engine mount bracket to the back of the engine using the three 16mm bolts and then align the engine mount into the bracket. Once in place, reinstall the 21mm bolt then tighten all of the fixings securely.

