

# Yaris GR torque mount fitting instructions

## Tools needed:

- Access to a ramp or a jack and axle stands
- Socket set
- Trim removal tool

## Kit Includes:


- AIRTEC torque mount
- 1 x bolt

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT




# Instructions

1. Raise the vehicle using either a ramp or axle and ensure it is secure.
2. Under the car remove the undertray by undoing the x 4 10mm holding the undertray to the bumper, followed by the 4 x 10mm bolts behind that and then work round removing x 12 plastic clips using a trim removal tool. Place the undertray aside.

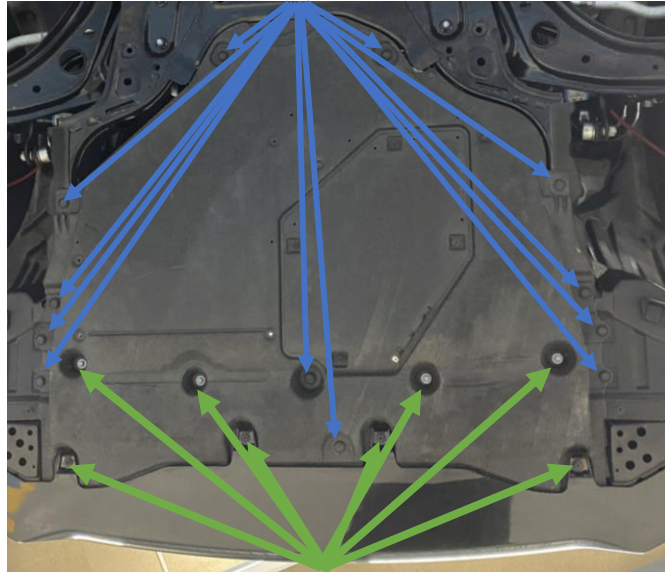

3. Undo the 2 x 22mm bolts holding the torque mount in.

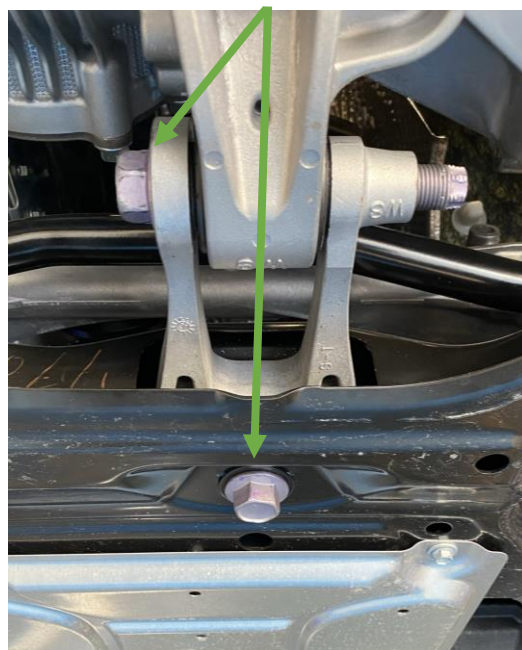

4. Undo the 4 x 14mm bolts holding the mount to the gearbox and remove from the car, you can now also remove the stock torque mount from the car.




5. Install the new torque mount ensuring the insert is seated correctly and reinstall the stock bolt.



6. Install the original mount back on to the gearbox using the 14mm bolts



7. Insert the new bolt into the torque mount and tighten. (You may need to lever the engine back slightly to line the bolt up properly.) Check all bolts are fully tightened.

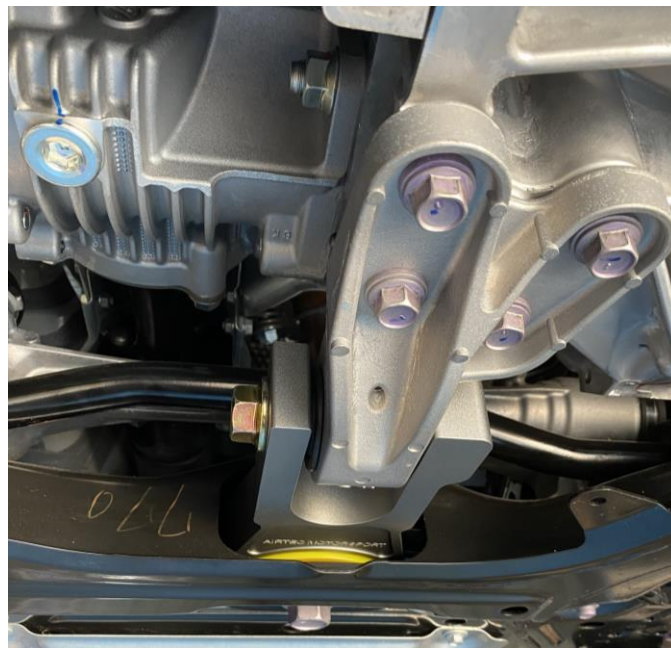

8. Reinstall the undertray onto the car.