

TOYOTA YARIS GR Quick Shift Instructions

Tools needed:

- 10mm Socket
- Ratchet
- Flat bladed screwdriver
- Philips Screwdriver
- Trim tool
- 4mm Allen Key

Kit Includes:

- AIRTEC Quick Shift
- X2 Washers
- X4 M5 x 20 Cap Head bolts



Instructions:

1. Start by removing X2 Philips screws securing the MAF sensor in place then remove MAF sensor.



2. Release the jubilee clip using a 10mm socket then pull the pipework away from the airbox.



3. Remove X2 trim clips from the air guide then carefully remove the air guide.




4. Unplug the vac line from the front of the airbox then unclip the line where secured on the air box.




5. Unclip the wiring harness using a trim tool from the side of the airbox then unplug from the front.



6. You can now remove the airbox by lifting from underneath.

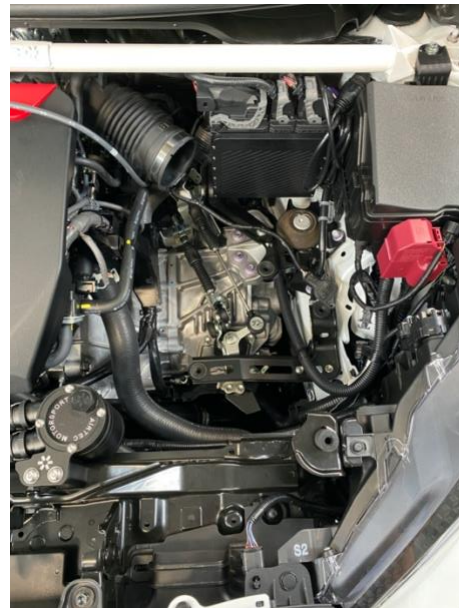

7. Remove the clip securing the gear linkage in place by releasing the pressure inside of the clip using a flat bladed screwdriver.

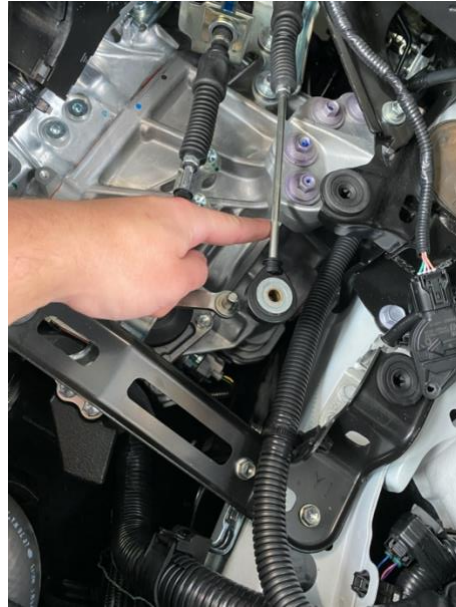

8. Install supplied washer onto the pin on the underside of the AIRTEC quick shifter.



9. Install the other washer on the other side of the gear linkage and then secure by reinstalling the stock clip.



10. Install the top side of the short shifter on top of the stock pin, now align both parts of the short shifter and secure together using the supplied 4mm Allen key bolts

