

Focus RS MK3 oil cooler kit fitting guide.



Fitting kit:

Oil cooler

Oil cooler fitting plate

Oil filter sandwich plate & adapters

2x Oil lines

4 x m6 x 16 socket head bolts

2 x m6 x 16 hex head bolts

12 x m6 pan washers

1 x oil line fixing bracket and separator

1 x oil line separator

1. Remove headlights, undo T30 torx on each headlight



2. Undo top of bumper, 2 silver T30 torx, 3 black T30 torx



3. Undo bonnet release cable from release handle



4. Undo two T30 torx holding inner arch to bumper



5. Remove plastic fixing clip holding bumper to arch



6. Undo bottom bumper tray. Seven T30 torx



7. Unclip side of bumper from wing + remove headlight washer covers



8. Remove bumper making sure to unplug loom on passenger side




9. Unscrew oil filter and fit sandwich plate with supplied adaptor thread then re fit oil filter



10. Bolt oil cooler into place onto original fixing tabs on front crash bar with supplied M6 x 16 hex head bolts



- 11.** Run oil lines from oil filter housing between radiator cradle and onto oil cooler. Fixing to gearbox with supplied bracket and hose separator as pictured

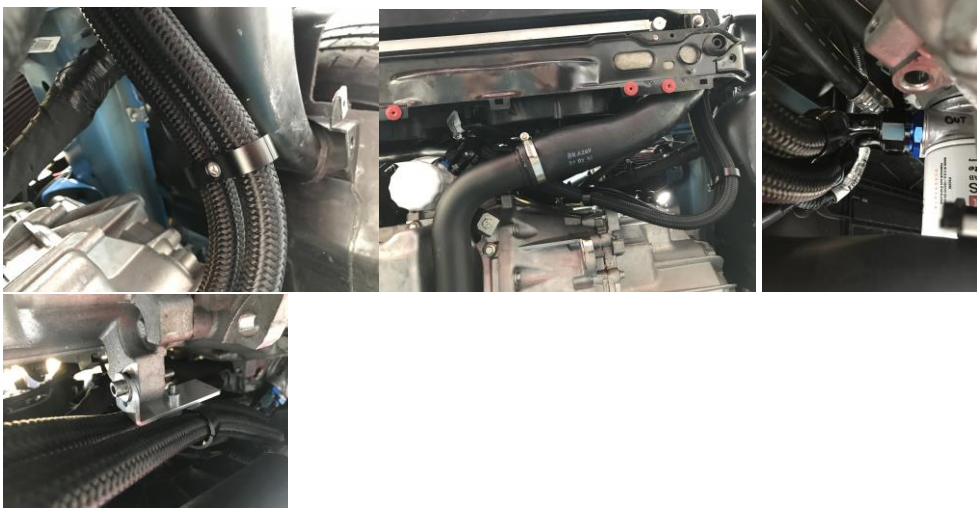

- 12.** Before re-fitting bumper, run car up to temperature checking for leaks



- 13.** Re-check oil level then refit bumper in reverse order.