

## AIRTEC Volvo C30 T5 oil cooler fitting instructions



### Tools needed:

- Jubilee Driver
- T20 & T27 Torx sockets
- Extension bars and ratchet
- 6MM allen key
- 10mm socket
- 4mm allen key

1. Remove 5x plastic push fit fittings & 2x T20 torx securing top of bumper



2. Remove headlight washer covers



3. Remove 4x T20 torx securing inner arch to bumper



4. Remove 2x T20 torx securing lower bumper



5. Unclip front section of arch extension



6. Unclip side of bumper from wing



7. Unclip fog lights




8. Carefully remove bumper



9. Remove top radiator cold air shroud



10. Loosely fit top securing bracket to oil cooler and bolt to bonnet release mechanism

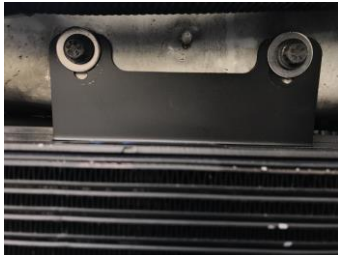

11. Fit oil lines to oil cooler, Once happy with clearance tighten bolts securing cooler and oil lines



12. Run oil lines from cooler between radiator and chassis leg



13. Remove standard oil modine and replace with -10 oil take off plate, connect coolant hoses with supplied joiner



14. Connect oil lines to supplied bracket which bolts to bottom of gearbox. Start car, check for leaks, once happy re-fit bumper in reverse order.

