

Toyota Yaris GR Carbon Fibre Front Air Feed Fitting Guide

Tools needed:

- Ratchet & Socket Set
- Allen Key Set

Kit Includes:

- AIRTEC Motorsport Carbon Fibre Air Feed
- 1x Foam Strip
- 3x M6x16mm Button Head Bolts
- 3x M6 Nyloc Nuts
- 6x M6 Pan Washers

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT



AIRTEC 
MOTORSPORT


AIRTEC 
MOTORSPORT

Instructions:

1. Start by sticking the supplied foam piece in place where the original air feed was located.



2. Now attach the bracket onto the air feed using the two M6 bolts with four washers and two nyloc nuts supplied. Make sure that the bracket is secured the correct way, as shown.

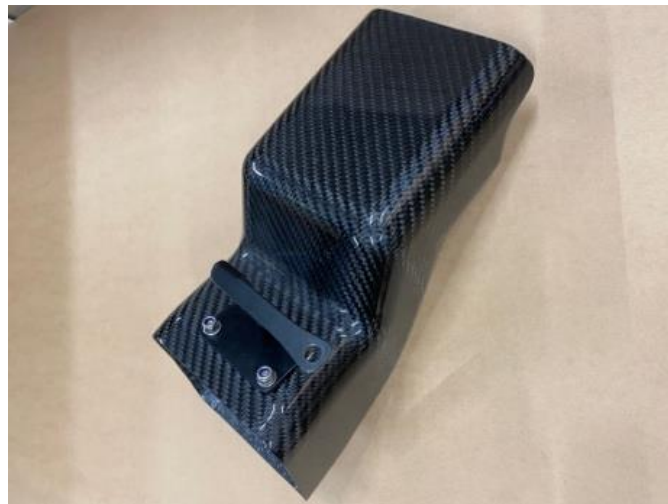

3. Locate the hole in the slam panel as shown and align the bracket to it. Then secure in place using the provided M6 bolt with a nyloc nut and washers.

