

MINI R56 Induction Kit Fitting Instructions

Tools needed:

- Socket set
- T20 Torx
- 4mm Allen key
- Cross headed screw driver

Kit Includes:

- 1 x AIRTEC Air Filter
- 1 x AIRTEC Air Box
- 1 x Pipe Joiner
- 1 x Silicone Hose
- X2 80mm stainless Clips
- X4 M6x12mm button head bolts
- X6 M6 pan washers
- X4 Tree push fits
- X2 STA-A2-PP14-X 0.7 Self tappers
- Trim to suit cold feed




Instructions:

1. Start by releasing the 7mm jubilee clip connecting the airbox to the pipework.



2. Now remove the x4 T20 torx screws from the lid of the airbox and remove the lid and stock air filter.

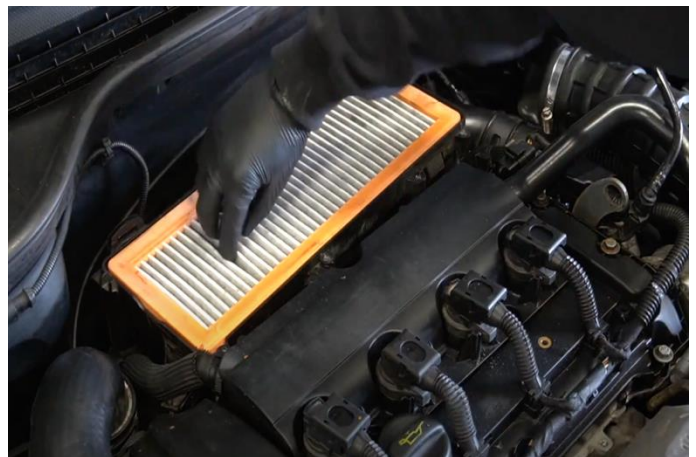

3. Install the AIRTEC air box by sliding the three tabs on the back of the air box into the three inserts in the stock airbox, then secure in place using the provided self-tapping screws and washers.



4. Insert AIRTEC air filter into the airbox then install filter adapter onto the side of the airbox but don't bolt in place just yet. You will also need to insert the alloy pipe connector into the stock pipework.



5. Install the air guide blank on the left hand-side of the airbox using the supplied M6 fittings then on the right-hand side secure the filter adapter onto the side of the air box using the supplied M6 fittings. You can now also install the silicone pipework from the alloy pipe connector to the filter adapter.



6. Now install the air guide to the underside of the bonnet. You may also need to remove any sound deadening from underneath the bonnet. Install the air guide by using the x4 supplied push clips to hold it in place.

