Kia Ceed GT Catch Can Fitting Instructions

Tools needed:

- Socket set
- Jubilee flexi-driver or flat-bladed screwdriver
- Hose clamp pliers

Kit Includes:

- 1x AIRTEC Billet Motorsport Catch Can Including Dipstick & Fittings
- 1x Kia Ceed Catch Can Bracket
- 2x Silicone Hoses Pro-KIT
- 2x Hose separators
- 4x M5x12 Button Head bolts
- 2x M5x8mm Button Head bolts
- 4x M5 Pan Washers

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT






Instructions

1. Open the bonnet and remove the engine cover by pulling firmly but carefully on each corner to release it from the rubber push fittings securing it in place.



2. Locate the breather hose going from the cam cover to the intake and using a pair of hose clamp pliers, release the fixings and remove the hose.

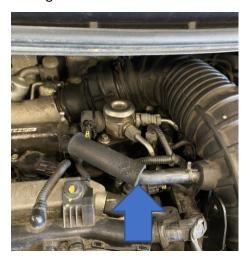

3. Undo the two bolts highlighted on the left-hand side of the engine bay using a 10mm socket.






4. Install the bracket behind the coolant bottle bracket and earth strap reusing the original bolts to install.



5. Attach the AIRTEC Motorsport catch can to the bracket using the supplied M5x12mm Button Head bolts and washers.

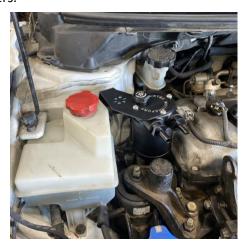

6. Install the hoses as pictured with the supplied jubilee clips, with the longer hose going from the left-hand take off to the intake pipe and the shorter one from the right-hand take off to the cam cover.





7. Install the supplied hose separators as shown and once happy with the positioning of the hoses, proceed to tighten all jubilee clips.



8. Finally, check everything is secure and reinstall the engine cover in reverse of removal.



AIRTEC *

