

KIA STINGER GT TURBO INTAKE HOSES FITTING GUIDE

Tools needed:

- Ratchet and Socket set
- Hose clamp pliers
- Jubilee flexi-driver or flat-bladed screwdriver

Kit Includes:


- 2x Pro Hoses silicone hoses
- 2x 90mm Jubilee clips
- 2x 70mm Jubilee clips
- 2x 35mm Jubilee clips
- 2x 22mm Jubilee clips
- 1x 20mm Jubilee clip

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE
YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT



Instructions

1. Open the bonnet and locate the original intake hoses, as shown. Start by undoing the two clips attached to both ends of each hose.

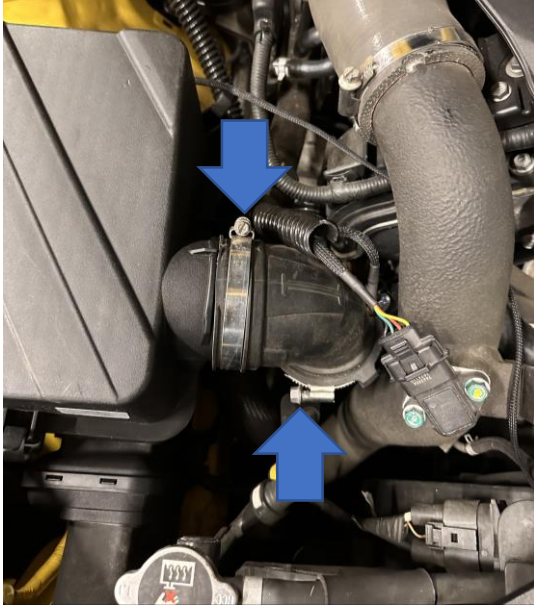

2. Using hose clamp pliers, remove the three hoses that are attached to the right-hand side intake. It is easier to disconnect the larger hose from the car side, at the front of the engine, as shown. On the left-hand intake there is just one hose to unclip from the front of the engine, as shown.



3. Now you can remove the original intakes from the car. One removed, match them to the Pro Hoses replacements and swap over any hoses that were attached to the intakes.



4. Install your new Pro Hoses intakes using the supplied jubilee clips in reverse of Steps 1 to 2. Make sure you reconnect all the ancillary hoses using the provided jubilee clips for each hose.



5. Finally, check all nine jubilee clips are fully seated and securely tightened.



AIRTEC✱
MOTORSPORT



AIRTEC✱
MOTORSPORT

AIRTEC✱
MOTORSPORT