

VW Mk8 Golf R AIRTEC Motorsport Turbo Elbow Fitting Instructions

Tools needed:

- Ratchet & Socket Set
- T25 Torx Bit
- Hose Clamp Driver or Flat-Bladed Screwdriver
- Hose Clamp Tool

Kit Includes:


- 1x AIRTEC Motorsport turbo elbow
- 1x Pro Hoses silicone hose
- 2x jubilee clips
- 2x bolts
- 2x washers

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT




Instructions:

1. Start by releasing the clamp securing the intake hose to the air box by using a hose clamp removal tool.

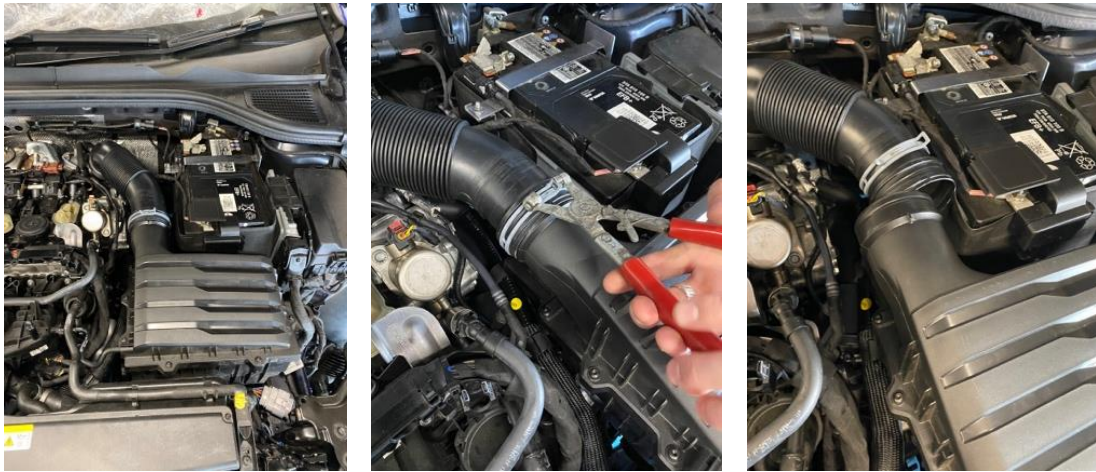

2. At the rear, locate and remove the two T25 Torx bolts securing the original elbow and then remove it together with the induction hose from the engine bay.

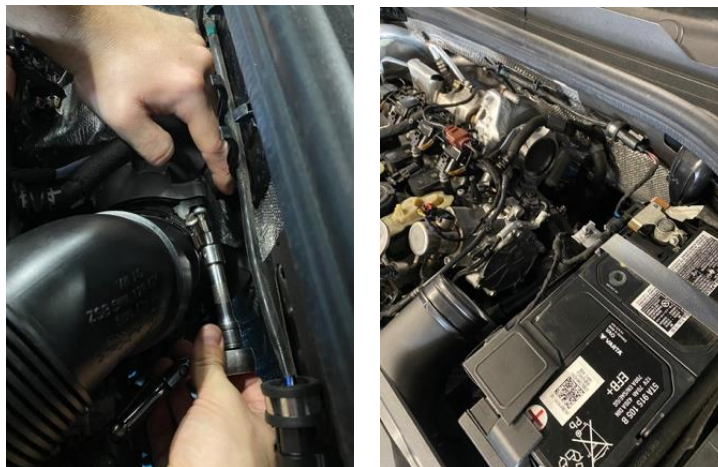

3. Remove the O-ring from the original elbow and transfer it over to the AIRTEC Motorsport item. Then loosen the jubilee clip from the induction hose and remove the elbow.



4. Finally, you can now install the AIRTEC Motorsport turbo elbow in place by reusing the two T25 bolts then reinstall the induction hose in reverse of Step 1.

