

# Ford Focus ST Mk4 Induction Air Feed Fitting Instructions

## Tools needed:

- Allen Keys
- 10mm spanner
- Trim removal tool
- Flat-bladed Screwdriver or Jubilee flexi-driver

## Kit Includes:


- 1x AIRTEC MOTORSPORT Induction Air Feed
- 1x Pro Hoses Silicone Connector
- 2x CNC Threaded Posts
- 4x M6x12mm Button Head Bolts
- 4x M6 Pan Washers

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT




# Instructions

1. Open the bonnet and if you have an AIRTEC Motorsport induction kit already fitted (as shown) you will need to remove the lid and the 10mm bolt holding the bracket to the car.

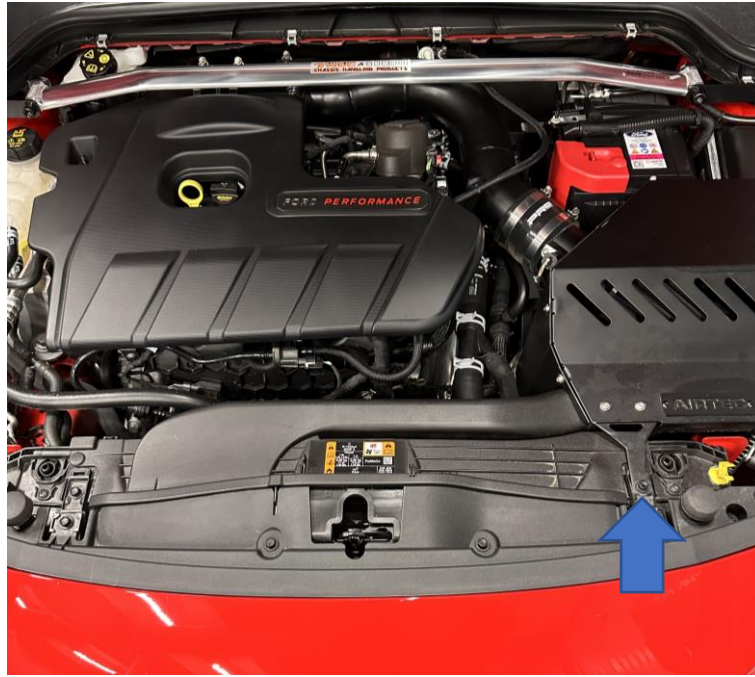


2. Using a trim removal tool, remove the two clips highlighted to allow you to then remove the original air scoop from the car.

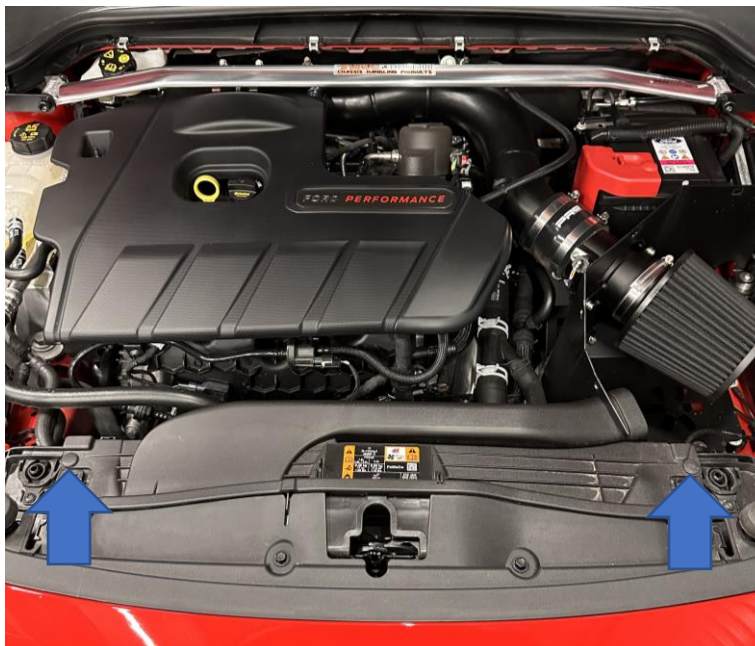

3. Attach the supplied mounting posts to your new AIRTEC Motorsport induction air feed using the supplied M6 bolts and washers.



4. On the right-hand side, locate the clip that holds the bonnet release cable and remove it. Then install the air feed in place and lift the cable over the post before refitting the clip. Align both posts with the holes in the car and then install the remaining M6 bolts with washers.

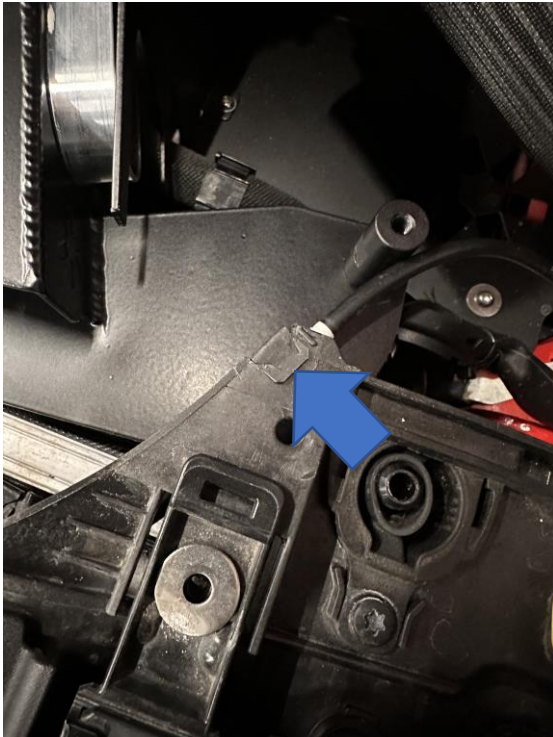



5. Finally, install the silicone coupler onto the air feed and use the supplied jubilee clip to secure it in place. If you are installing this with the standard air box then use the additional supplied jubilee to secure to the air feed. If you are installing with an AIRTEC Motorsport induction kit the other end does not need one but reinstall the 10mm bolt.



**AIRTEC**   
MOTORSPORT

**AIRTEC**   
MOTORSPORT