

# VW Golf R Mk7 Enclosed Intake

## Fitting Instructions


Tools needed:

- Ratchet Set
- 3mm Allen Key
- 5mm Allen Key
- 7mm Socket
- T25 Torx Bit
- Hose Clip Driver or Flat-Bladed Screwdriver

Kit Includes:

- 1x AIRTEC Motorsport intake pipe
- 1x AIRTEC Enclosed air box
- 1x Mounting Bracket
- 1x Alloy Spacer
- 6x Plastic Push Fittings
- 2x M4x12mm Allen Head Bolts
- 1x M6x16mm Allen Head Bolt
- 1x M6x70mm Allen Head Bolt
- 2x M6 Washers
- 4x M4 Washers
- 2x M4 Nyloc Nuts

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

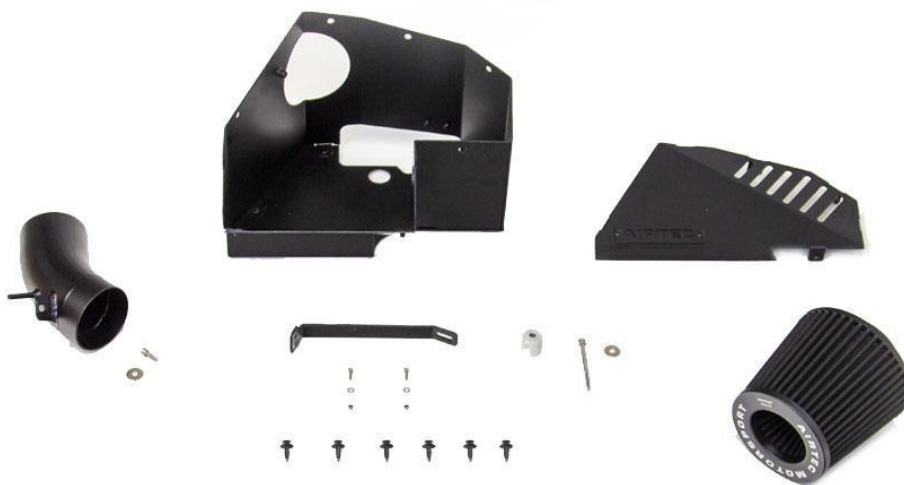

## Instructions:

1. Start by removing the original air box from the engine bay by releasing the clip securing it to the intake hose.



2. Now remove the vacuum pipe from the original air box.





3. The original air box can now be removed by carefully but firmly pulling up on the three rubber mount bushings from the underneath of the air box.



4. You can now install the new intake pipe and secure in place using the supplied jubilee clip (pictured here with our optional uprated Pro Hoses silicone connector).



5. Now install the base of the new air box by securing it to the bracket on the intake pipe with the supplied M6x16mm bolt and washer, as shown. Then place the alloy spacer underneath the back of the air box base where the original air box was originally mounted, as shown. You can then secure it in place using the supplied M6x70mm bolt and washer with a 5mm Allen key.

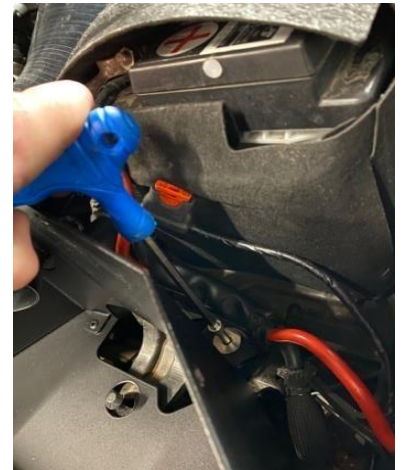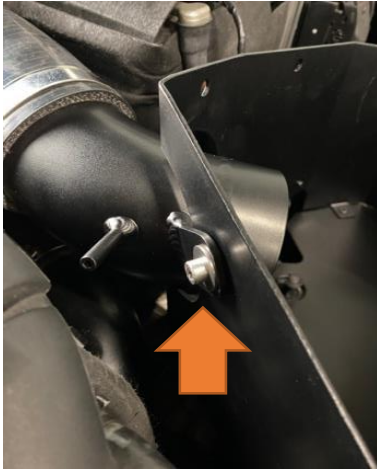

6. Remove the T25 Torx Bolt from the back of the radiator pack and then attach the supplied mounting bracket and re-install the bolt. You can then attach the bracket to the air box base with the supplied M4 nuts, bolts and washers either side.





7. The air filter can now be installed by securing it to the intake pipe using the jubilee clip supplied. Also reattach the vacuum line removed in Step 2 to the new pipe.



8. Finally, install the enclosed air box lid by placing it on top of the base and align the tabs with the allocated holes. You can now secure the lid using the supplied push fittings. Then check everything is aligned, tight and secure.

