

Renault Megane Mk4 RS280/300

Catch Can Fitting Instructions

Tools needed:

- Ratchet and Socket Set
- Hose Clamp Pliers
- Jubilee Flexi-Driver or Flat-Bladed Screwdriver
- Loctite

Kit Includes:

- 1x AIRTEC Catch Can
- 1x Pro Hoses kit (number 155)
- 1x M6x16mm Hex head bolt
- 1x M6 Mudguard Washer
- 4x 25mm Jubilee Clips

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT



Instructions

1. On the right-hand side of the engine, locate the original breather hose. Please note, the car shown has an AIRTEC Motorsport induction kit fitted however the instructions still apply with the original airbox fitted.



2. Remove the hose from the car by loosening the securing clips at both ends. If you have the AIRTEC Motorsport induction kit fitted, you will also need to remove the short 90-degree silicone hose attached from the original hose to the induction hose.




3. Locate the bracket highlighted and then use the supplied M6 bolt and washer to attach the catch can to it, as shown. We recommend applying Loctite to the bolt.



4. Install the longer hose onto the take-off next to the oil cap, as shown and then onto the take-off pointing towards the front of the car with two of the jubilee clips supplied.



5. Install the shorter hose onto the induction pipe and then onto the remaining take-off on the catch can with the remaining jubilee clips, as shown.

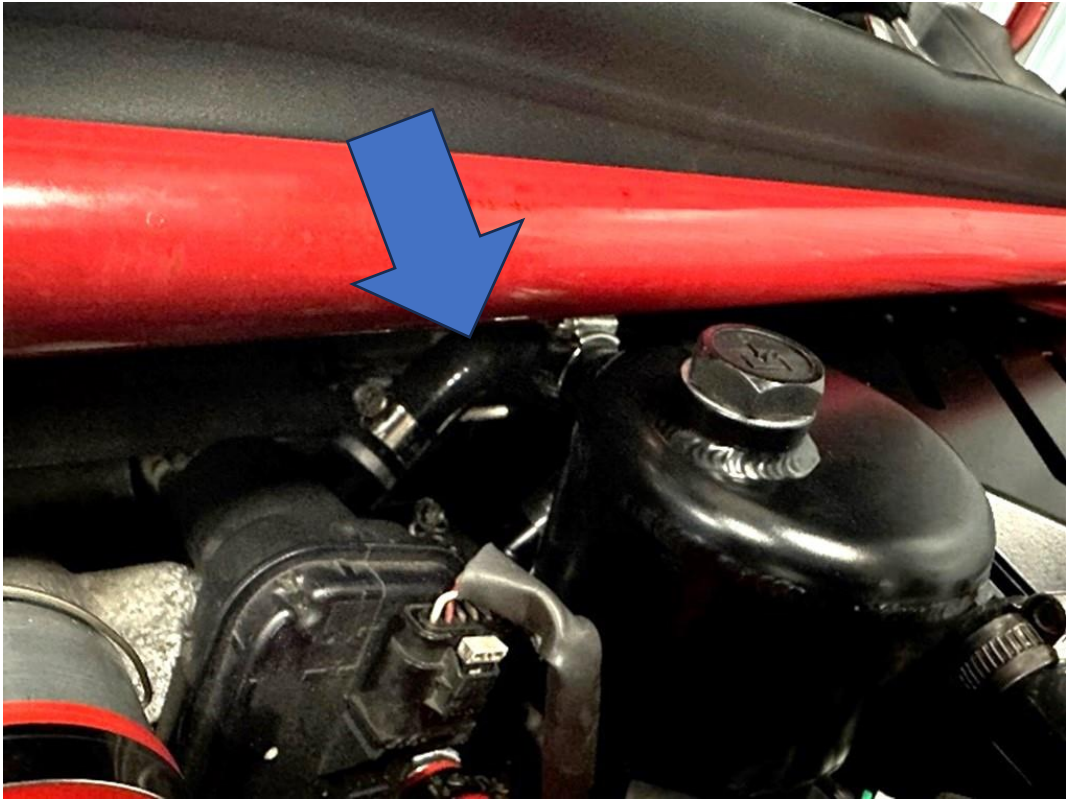

6. Finally, double check everything is fully tightened and secured.

