

# Hyundai i20N Torque Mount Fitting Instructions

## Tools needed:

- Ratchet and Socket Set
- Allen Key Socket Set

## Kit Includes:

- 1x AIRTEC Motorsport Torque Mount
- 1x AIRTEC Motorsport Torque Mount Base
- FITTING KIT:
  - 1x M12x90mm Socket Head Bolt
  - 1x M12 Washer
  - 2x M10x25mm Socket Head Bolts

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT




# Instructions


1. Raise the vehicle into the air using either a ramp or a jack and axle stands following the manufacturer's guidelines for lifting points.
2. Under the car locate the original torque mount at the back of the gearbox.



3. Undo the 17mm bolt holding the torque mount to the bracket.

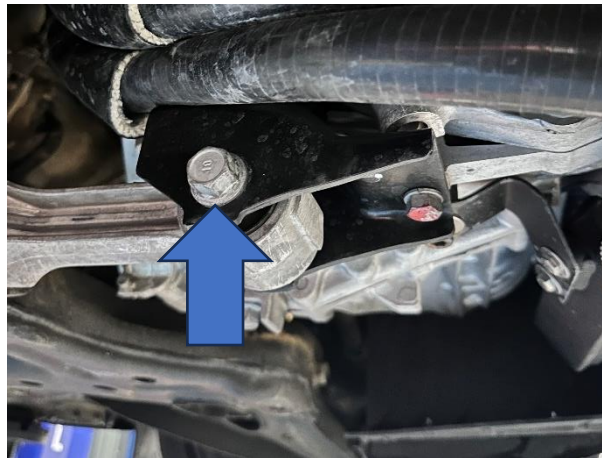

4. Undo the two 14mm bolts holding the torque mount base to the body of the car.

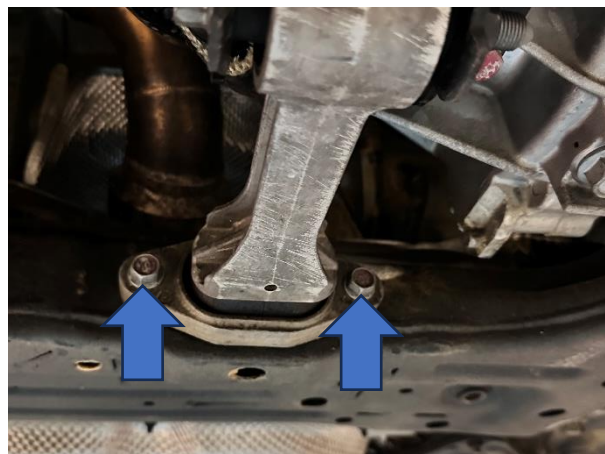

5. Install the new base onto the body of the vehicle noting the orientation as per the picture using the supplied M10 bolts.



6. Install the torque mount body onto the base using the supplied M12 bolt, noting the orientation from the picture below.



7. Finally, re-install the original 17mm bolt removed in Step 3, making sure to install the supplied spacer between the bush and the bracket.

