

# Audi S1 Turbo Muffler Delete Fitting Instructions

## Tools needed:

- Hose Clamp Removal Tool
- Jubilee Flexi-Driver or Flat-Bladed Screwdriver
- Allen Key Set

## Kit Includes:

- 1x AIRTEC Motorsport Turbo Muffler Delete
- 1x Rubber Gasket




PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

# Instructions

1. Remove the induction pipe using a pair of hose clamp removal tool which will give you access to the turbo muffler.



2. At the back of engine, locate the turbo's outlet hose and using a jubilee flexi-driver or flat-bladed screwdriver, undo and remove the standard hose attached to it.

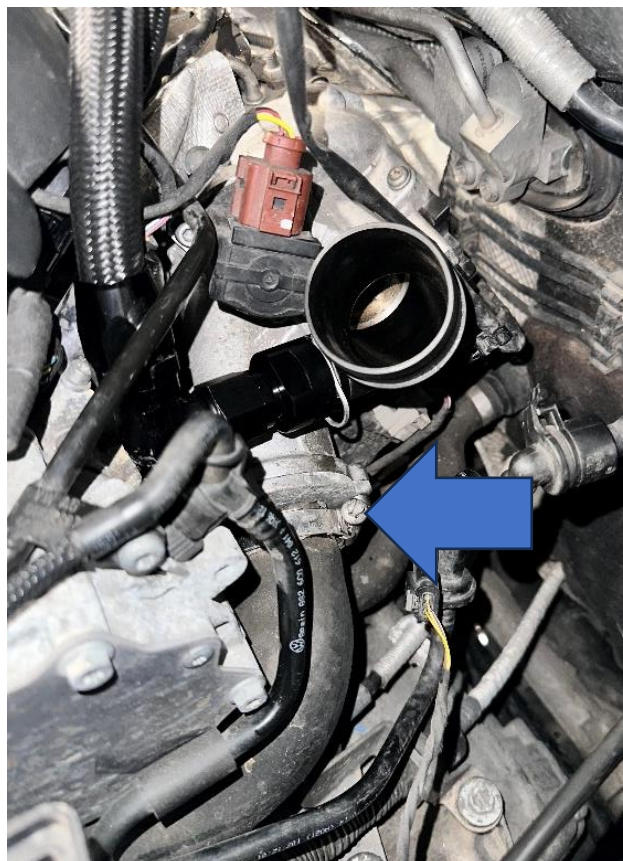

- Using a 5mm Allen Key, undo the three bolts holding the original turbo muffler insert and remove it.



- Finally, install the supplied rubber gasket onto the AIRTEC Motorsport turbo muffler delete and insert it into the turbo. Reuse the original bolts and then reinstall the hose and induction pipe in reverse of removal.

