

Hyundai Kona N Header Tank Fitting Instructions

Tools needed:

- Ratchet and Socket Set
- 5mm Allen Key
- Hose Clamp Pliers
- Large Syringe (to remove coolant from header tank)
- Replacement Coolant

Kit Includes:

- 1x AIRTEC Motorsport Header Tank
- 1x M6x12mm Hex Head Bolt
- 1x M6 Washer

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT




Instructions

1. Open the bonnet and locate the header tank on the left-hand side. Clamp the two hoses and then try to remove as much coolant from the header tank via the cap using a large syringe or similar. Undo the clips holding the two hoses and remove. The two 10mm bolts holding the tank in can then be undone and the original tank removed.



2. Locate the nut attached to the left-hand engine mount and loosen it enough so that the header tank mounting bracket can slide underneath it.

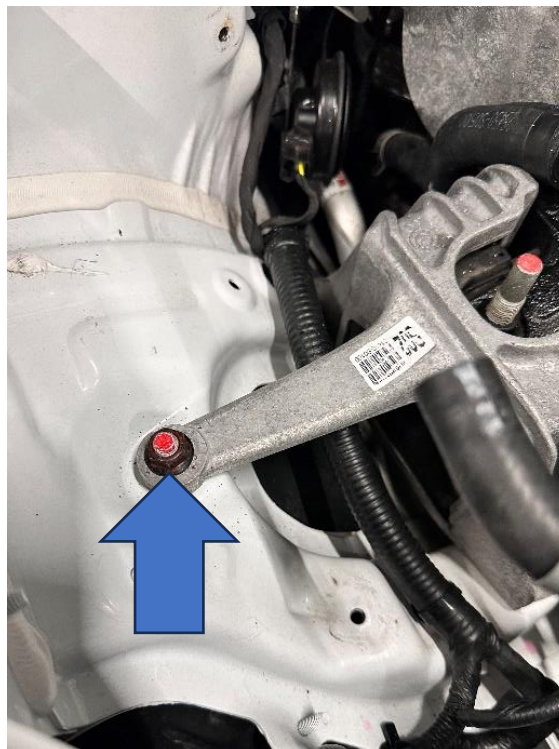

3. Now install the header tank by slotting the bracket underneath the nut and locate the other bracket under the hole next to the bonnet stay (blue arrow).



4. Install the supplied M6 bolt and washer as shown onto the bracket to secure. Re-install the hoses onto the header tank and secure with the original clips.



5. Finally, fill the header tank with coolant so that it is approximately two thirds of the way up the sight glass.

