

Mini Cooper S R56 Catch Can Hose Fitting Instructions (to suit aftermarket induction hose)

Tools Required:

- Jubilee Flexi-drive or Flat-Bladed Screwdriver

Kit Includes:


- 1x Pro Hoses Silicone Hose
- 1x 90-Degree Plastic Elbow
- 1x 90-Degree Plastic Push Fit Connector
- 2x 35mm Jubilee Clips

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR
WITH THE STEPS BEFORE CARRYING THEM OUT



Instructions


1. Follow the fitting instructions for the R56 catch can kit to the point where the hose is connected from the engine to the right-hand outlet on the catch can.

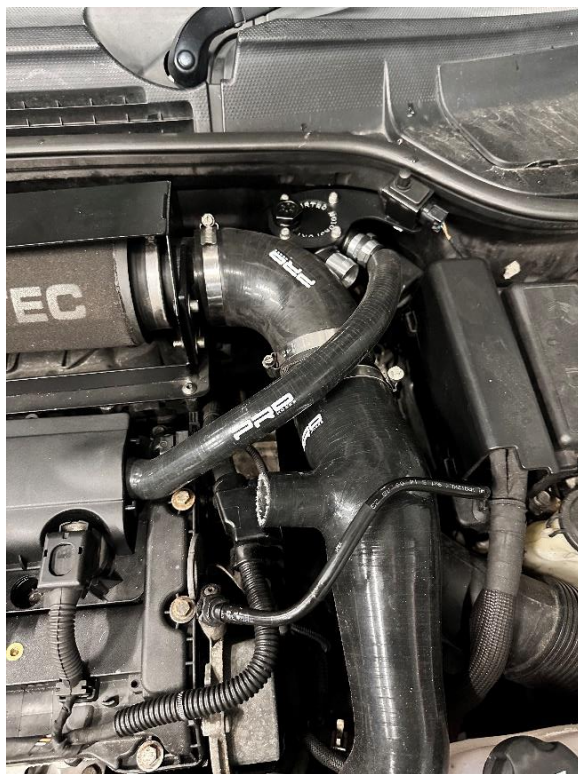

2. Install the supplied push fit connector onto the angled end of the hose, as shown.



3. Now connect the left-hand hose to the catch can and route it under the intake pipe, as shown.

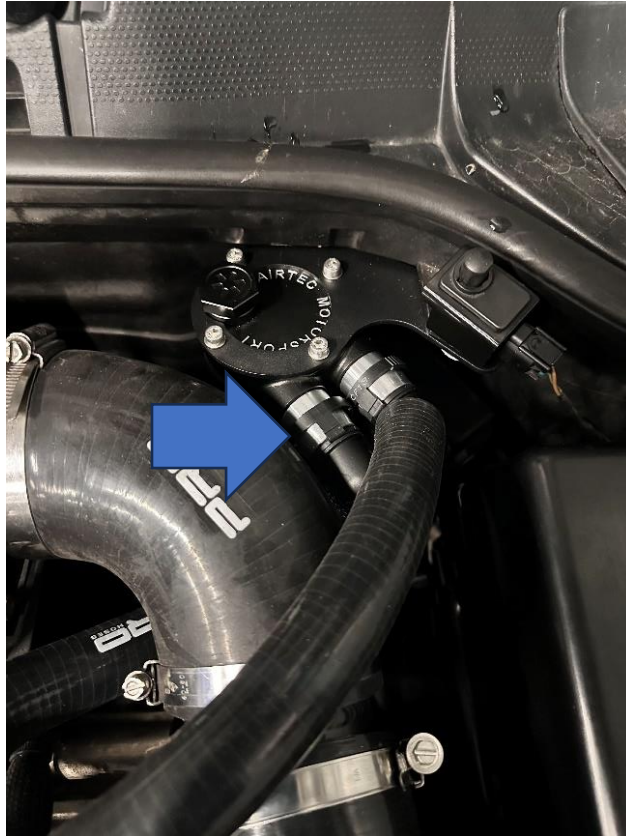

4. Finally, install the 90-degree plastic elbow into the intake pipe, as shown. Then install the silicone hose from the catch can onto the elbow with jubilee clips and tighten.

