

Toyota Yaris GR Vented Bonnet Mounting Brackets Fitting Guide


Tools needed:

- 10mm Spanners
- 10mm Socket with Ratchet

Kit Includes:


- 2x AIRTEC Motorsport Mounting Brackets
- 8x Large M6 Washers
- 4x M6 Nyloc Nuts
- 4x M6x16mm Bolts

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

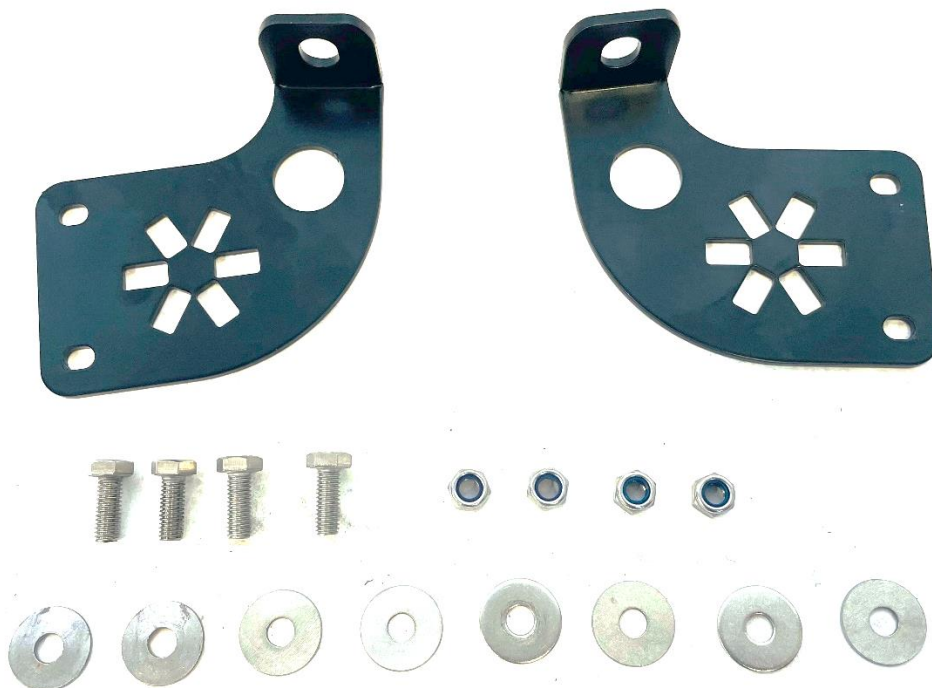


Instructions

1. Locate the holes below the rubber bonnet stop by the headlight. You will be using the top and bottom holes (blue arrows).

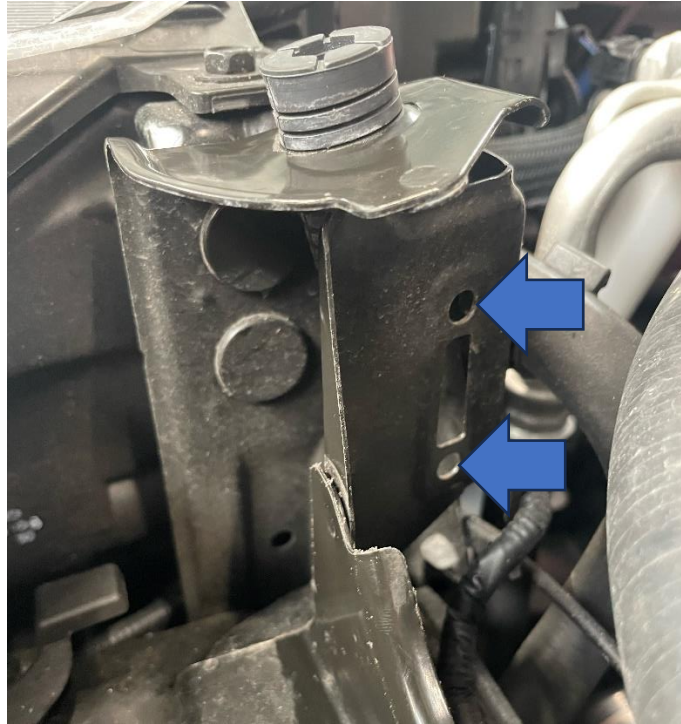

2. Make sure you use the correct sided bracket (please study picture below) and then feed the supplied bolts in from behind, as shown.

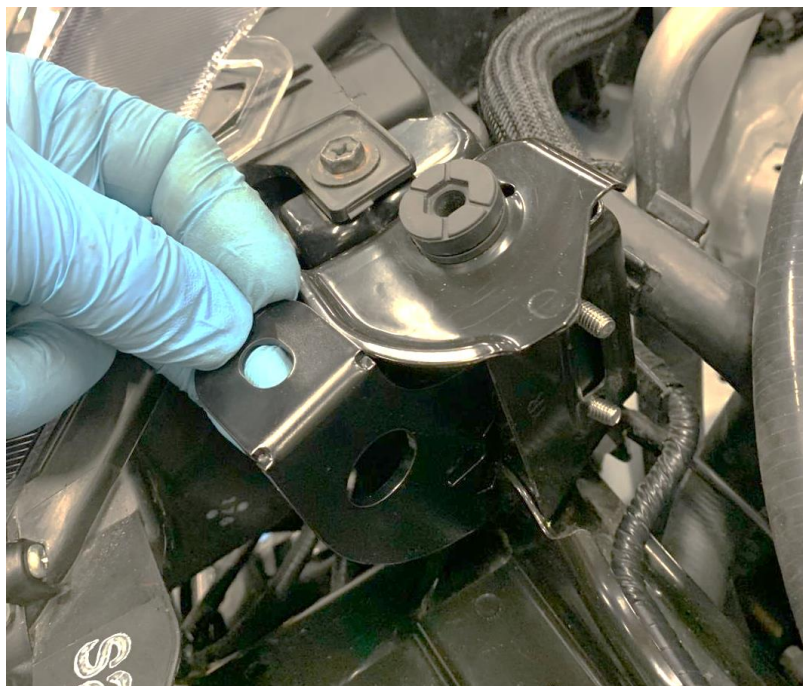

3. Now fit the supplied nuts and washers and tighten but not fully to allow some adjustment if required.



4. Finally, you can now fit the Aero Catch bonnet pin and adjust the angle of the bracket to suit. Once in the correct position and the Aero Catches are fully fitted and aligned, fully tighten the mount's nuts and bolts.

