

# Enlarged Turbo Inlet Hose for Suzuki Swift MHEV Fitting Instructions

## Tools Required:

- Jubilee Flexi-Driver or Flat-Blade Screwdriver
- Hose Clamp Pliers or similar

## Kit Contents:


- 1x Pro Hoses Enlarged Turbo Inlet Hose
- 1x Pro Hoses Breather Hose
- **Fitting Kit:**
  - 1x 80mm Jubilee Clip
  - 1x 60mm Jubilee Clip
  - 3x 22mm Jubilee Clips





PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

## Instructions:

1. Firstly, remove the original breather hose secured to the induction hose using hose clamp pliers or similar.

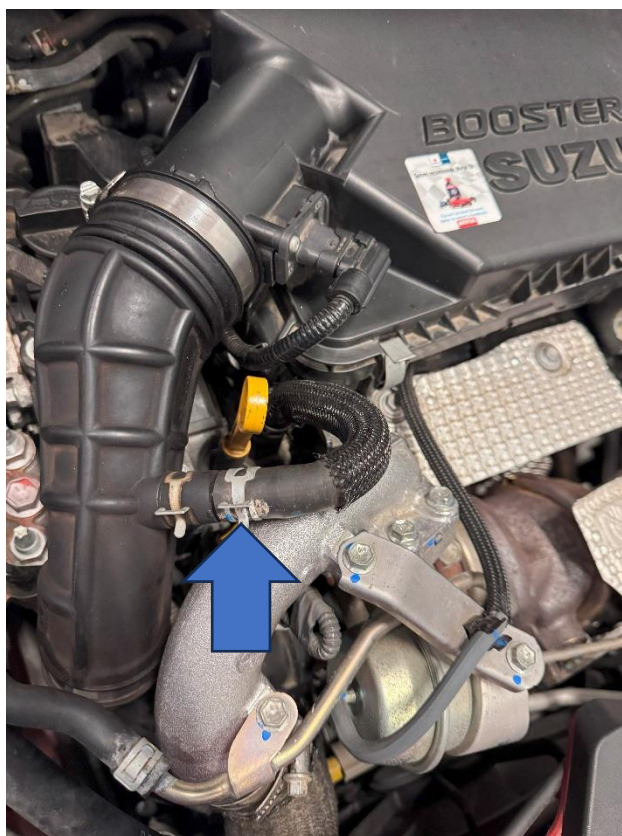

2. Then undo the two jubilee clips holding the original induction hose to both the air box and the turbo. The hose can then be removed from the car.

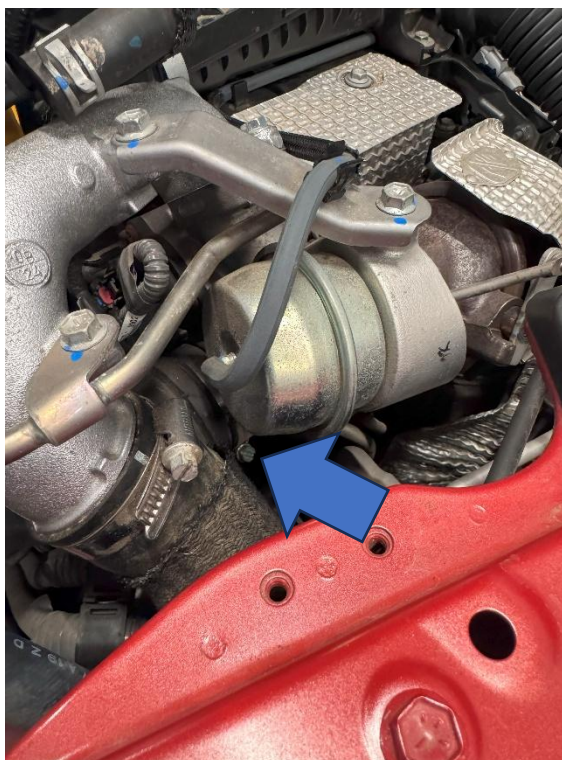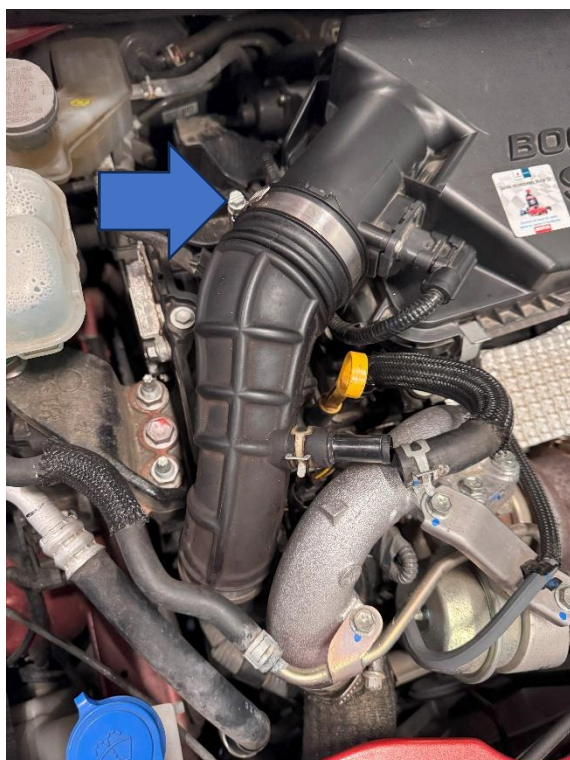




3. Using hose clamp pliers, remove the breather hose from the engine.




4. Using hose clamp pliers, remove the tension clip that secures the plastic joiner in the original turbo inlet hose.

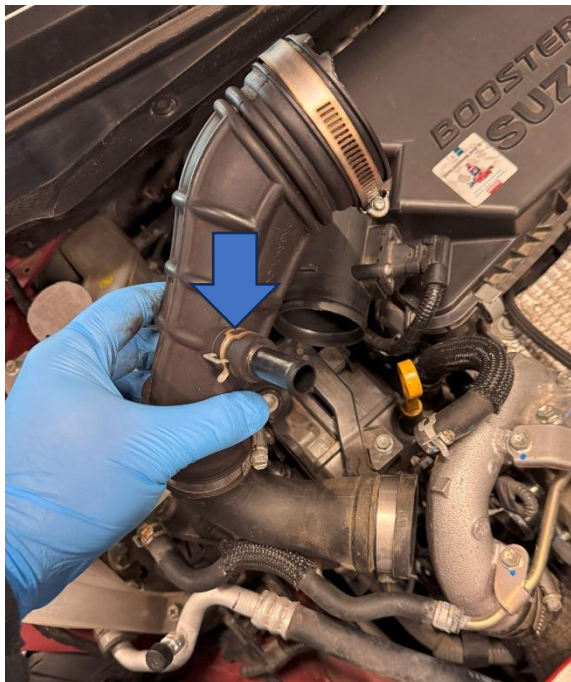




5. Install the new breather hose into the car and position the jubilee clip so you can gain access to it once the turbo inlet hose has been installed.

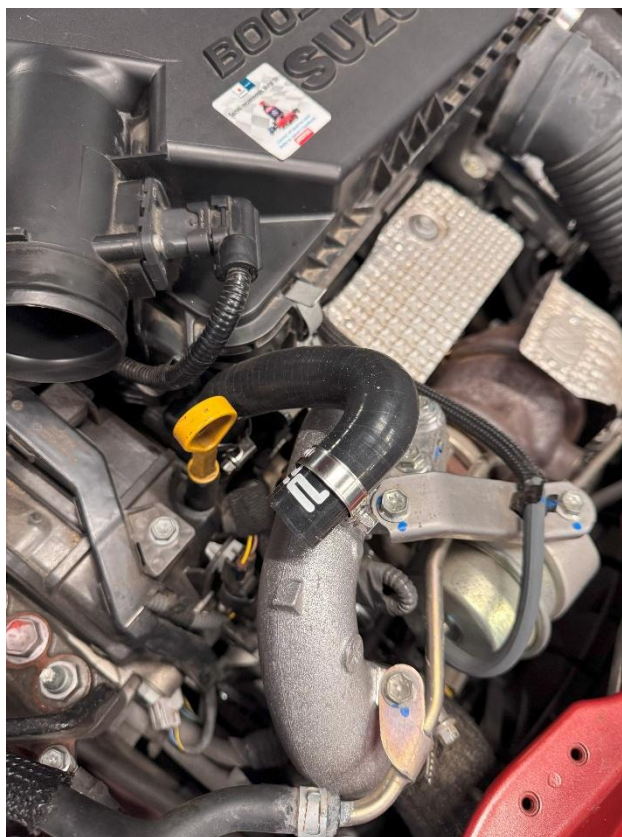

6. Fit the turbo inlet hose in place with the supplied jubilee clip proceed to install the breather hose onto the other end of the joiner and tighten and then install it into your new hose and secure with one of the supplied 22mm jubilee clips.

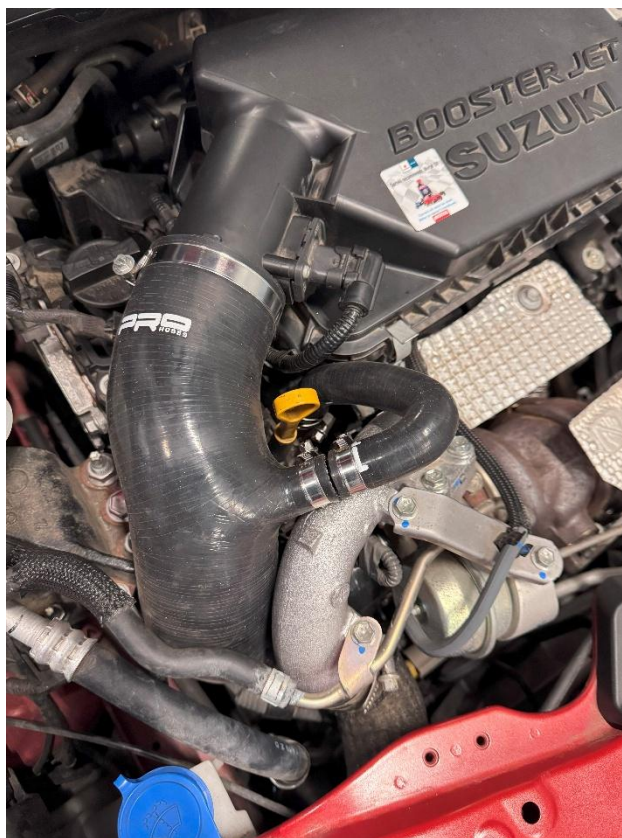

7. Lastly, once happy with the positioning of both hoses fully tighten all jubilee clips.

