

Mini R56 Torque Mount Fitting Instructions

Tools Required:

- 17mm Spanner or 17mm Socket with Ratchet

Kit Contents:

- 1x AIRTEC Motorsport Torque Mount for R56 Mini
- 2x Powerflex Bushings
- 2x Bushing Inserts
- 2x Spacer Shims



PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. Start by removing the 17mm bolt from the front of the engine mount.




2. Now remove the 17mm bolt securing the other end of the torque mount in place.



3. The original torque mount can now be removed.



4. To fit the new torque mount, slide the supplied spacer shims into position on either side, as shown before fitting the mount into place.

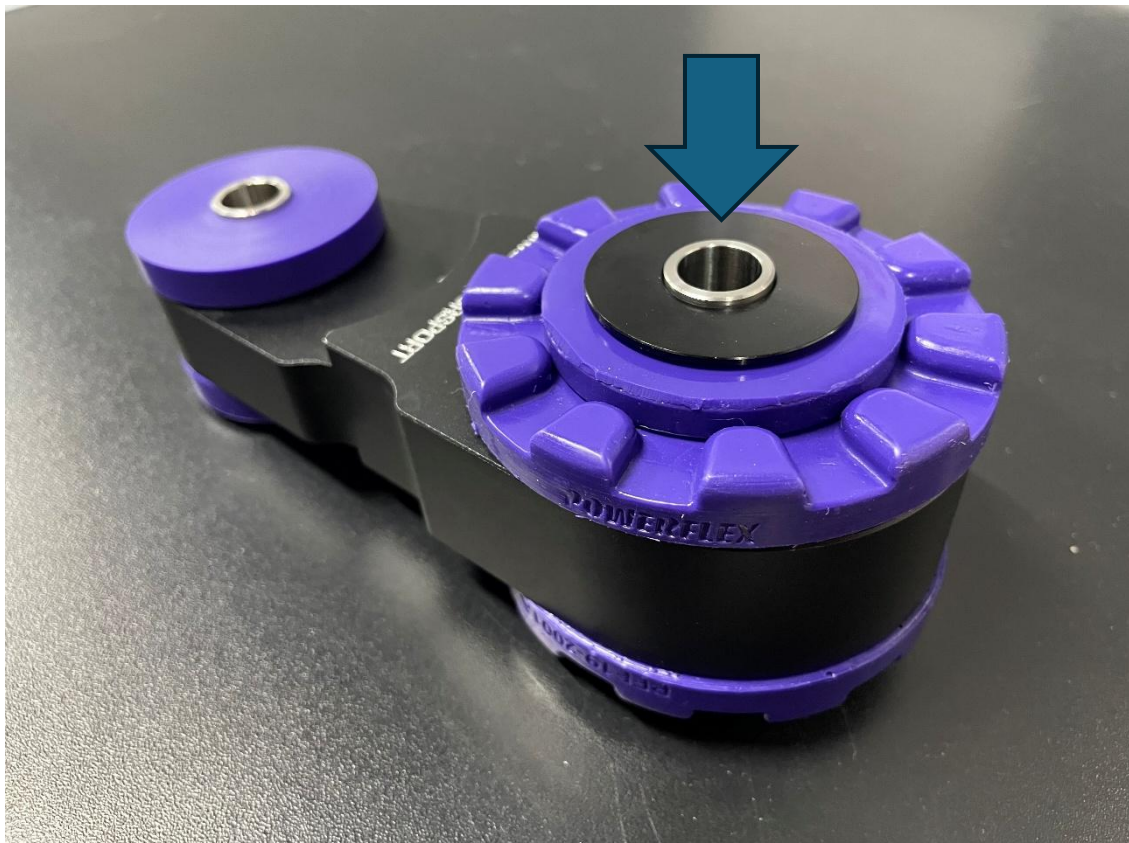

5. Finally, you can then reuse the original bolts to secure in place and fully tighten.

