

Honda Civic FK8 Type-R Undertray Fitting Instructions

Tools Required:

- Large Flat-Head Screwdriver
- Phillips Head Screwdriver
- 10mm Spanner/socket
- 4mm Allen Key

Kit Contents:


- 1x AIRTEC Motorsport Honda FL5 Under Tray
- 6x Black M6 Under Tray Clips
- 8x M6x16mm Button Head Bolts
- 8x M6x18mm Washers




PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. Start by removing the four Phillips-head bolts.

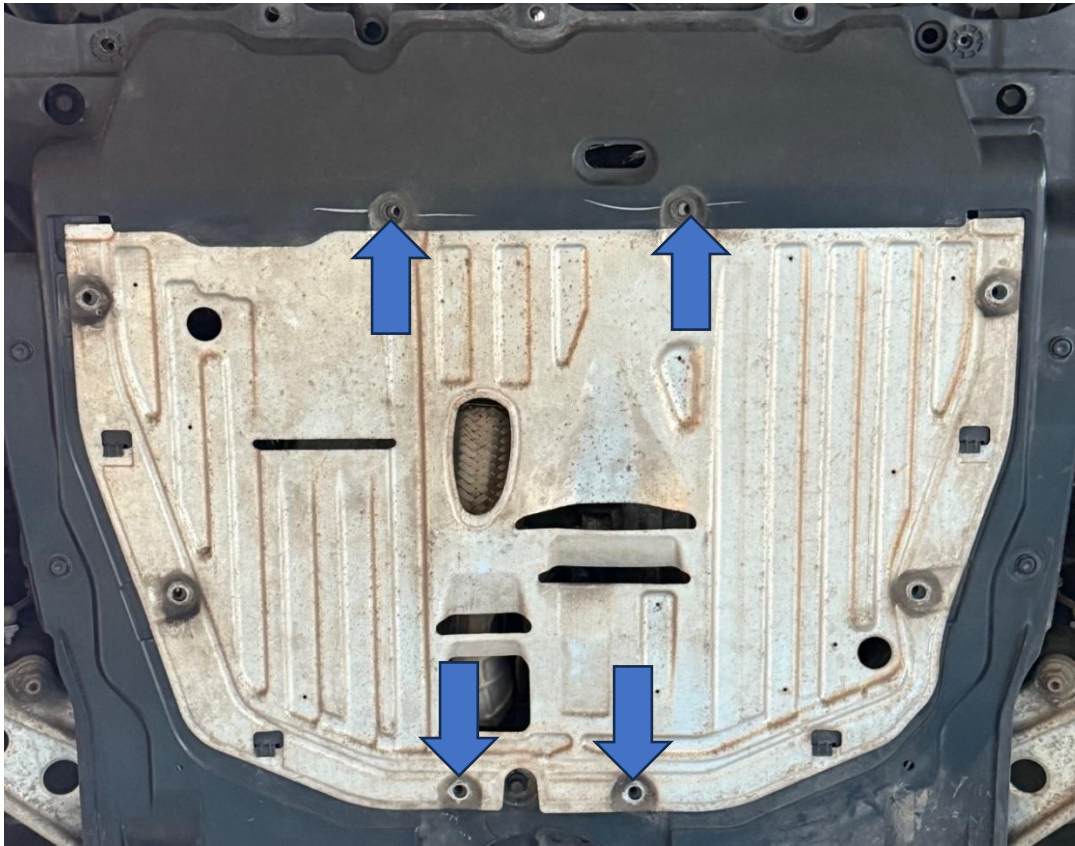

2. Next, undo the four rotation clips in each corner of the under tray. Then pull backwards to release it from the four plastic clips at the bottom and remove the undertray.

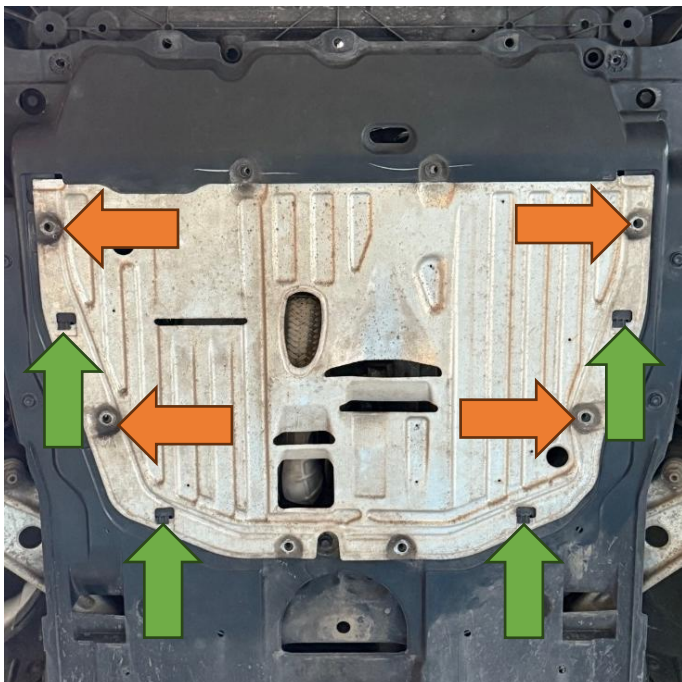

3. Remove the four rotation clips fittings from the plastic undertray surround on the car by sliding them out. Then replace them with the four supplied M6 under tray clips, as shown.

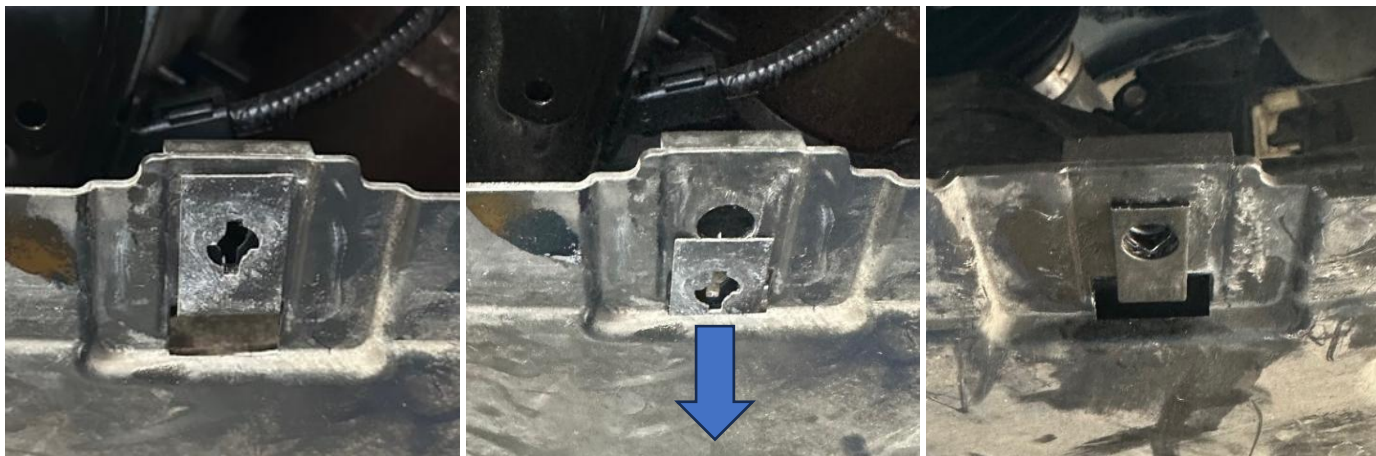

4. Finally, now fit the new under tray in place by reusing the four plastic holding clips. Secure the undertray in place using the eight supplied M6 button head bolts and washers.

