

Ford Focus RS Mk3 Radiator Fitting Kit Installation Guide


Kit Contents:

- 1x AIRTEC Motorsport Radiator
- 3x Mounting Brackets
- 2x Mounting Pins
- 2x M6x16mm Hex Bolts
- 2x M6x20mm Washers
- 5x M5x12mm Button Head Bolts
- 5x M5 Pan Washers



Instructions

1. Before the AIRTEC Motorsport radiator is fitted, you must fit the three supplied brackets with the five M5x12mm bolts and washers provided as shown.

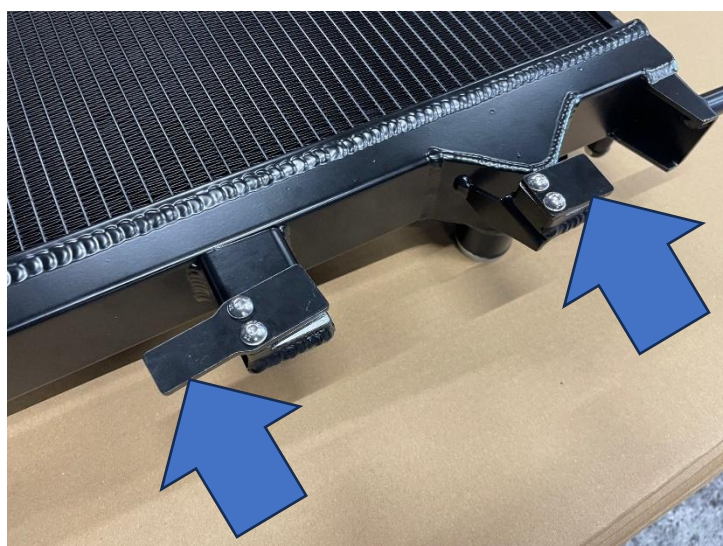

2. The mounting pins must then be fitted using the two M6x16mm bolts with washers provided. You can then remove the original radiator and fit the new one in place.

