

Audi A1 Enlarged Turbo Inlet Fitting Instructions

Tools Required:

- Hose Clamp Pliers or Similar
- T27 Torx Bit
- Jubilee Clip Flexi-Driver or Flat-Blade Screwdriver

Kit Contents:

- 1x AIRTEC Motorsport Turbo Adaptor
- 1x Pro Hoses Enlarged Turbo Inlet Hose
- 2x 90mm Jubilee Clips



PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR
WITH THE STEPS BEFORE CARRYING THEM OUT


Instructions:

1. Remove the hose going to the original plastic turbo elbow by using a pair of hose clamp plier or similar, squeeze the clamps to and pull the hose to remove.


Please note: If you already have the AIRTEC Motorsport induction kit fitted then remove the air box lid and silicone hose.



2. Locate and unhook the wiring loom clip connected to the original turbo elbow and undo the T27 Torx fitting attaching the elbow to the turbo.

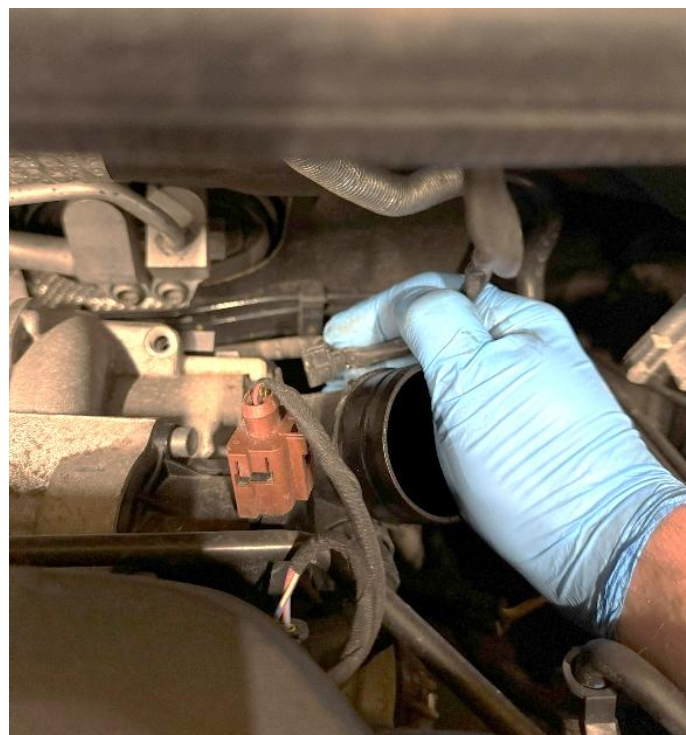


3. Rotate the turbo elbow clockwise and then disconnect the vacuum hose underneath and squeeze the plastic clip to remove the take-off hose from the elbow. It can then be removed from the car.

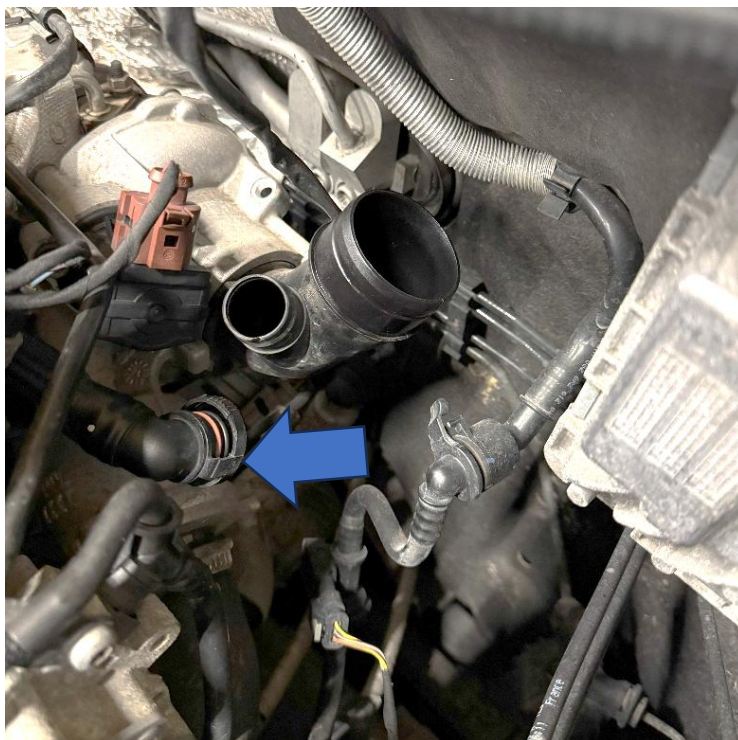

4. Apply a little grease to the O-rings on your new AIRTEC Motorsport turbo inlet adaptor before fitting it by rotating it anticlockwise to lock in place.



5. Fit the supplied silicone hose in place, connecting the plastic take-off and vacuum hose previously removed. Secure it in place with one of the jubilee clips provided.

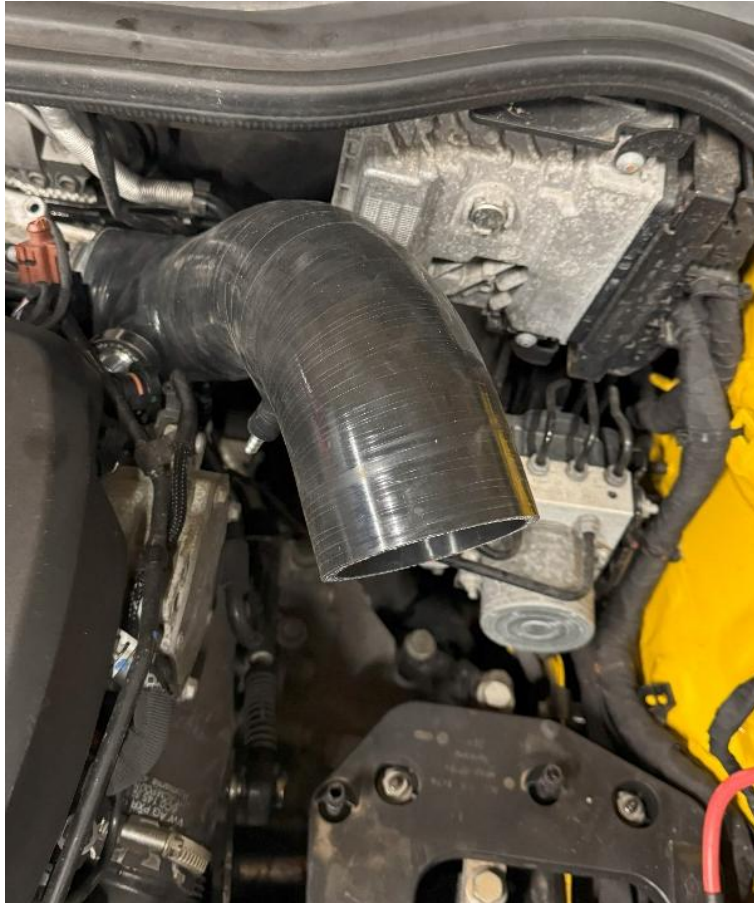

6. Finally, the AIRTEC Motorsport induction kit can then be fitted in place.

