

Suzuki Swift MHEV ZC33S Catch Can Fitting Instructions

Tools Required:

- Socket Set
- Hose clamp removal tool or flat bladed screwdriver
- Jubilee flexidriver
- Allen Keys

Kit Contents:

- 1x AIRTEC Motorsport CNC Catch Can
- 2x AIRTEC Motorsport Mounting Brackets
- 2x Pro Hoses Silicone Hoses
- **Fitting Kit:**
 - 2x Straight Connectors
 - 4x M5x10mm Button Head Bolts
 - 4x M5 Pan Washers
 - 2x 25mm Jubilee Clips




PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. Open the bonnet and locate the original breather hose. If your car is fitted with a standard hose you will need a pair of hose clamp pliers to remove the hose.
Our car is fitted with our AIRTEC Motorsport induction hose, which includes a replacement breather hose so for this there are two jubilee clips to remove.



2. Undo the 12mm bolt and 14mm nut located below.

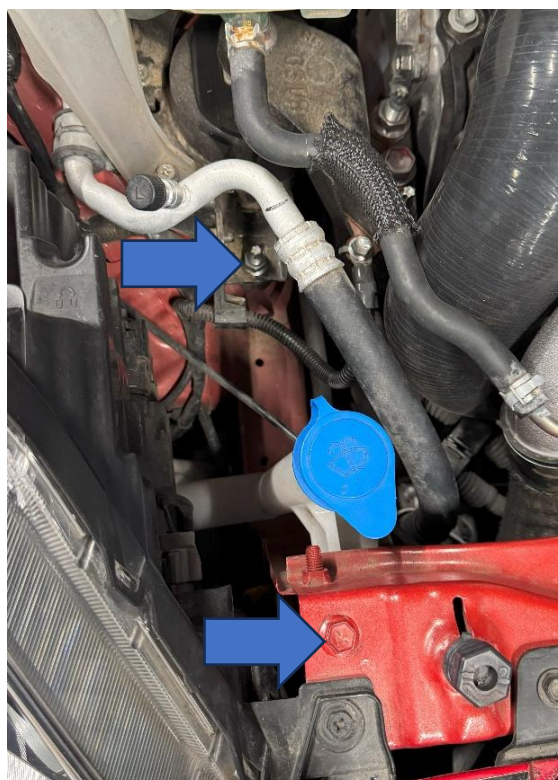


3. Assemble the catch can as shown.



4. Install the catch can assembly onto the car and then reinstall the nut and bolt removed in Step 2.



5. Finally, install the hoses onto the car as shown and when happy with the routing and location, tighten the jubilee clips provided.

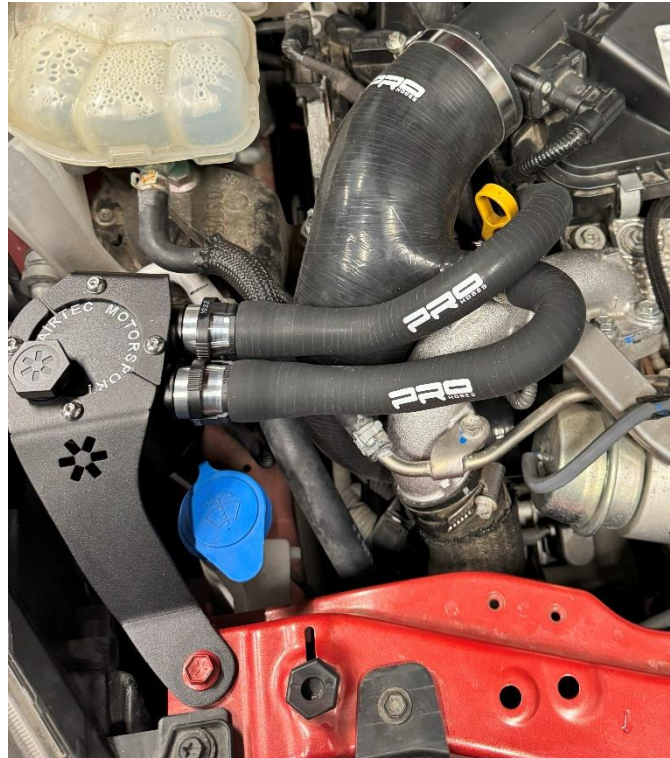

Please note: Check the dipstick on the catch can periodically and empty as necessary by unscrewing the base of the catch can anti-clockwise.