

AIRTEC Fitting Instructions

Vehicle:	Polo AW 2.0 EA888 Gen 4
Product:	Turbo Muffler Delete
Part number:	ATMSVAG23



Kit Contents:

<ul style="list-style-type: none">1x AIRTEC Motorsport Turbo Muffler Delete1X Pro Hoses Silicone Hose	<ul style="list-style-type: none">2x 80mm Jubilee Clips
------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------


Tools Required:

<ul style="list-style-type: none">Jubilee Clip Flexi-Driver	<ul style="list-style-type: none">5mm Allen key
---------------------------------------------------------------------------	---------------------------------------------------------------


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. Open the bonnet and remove the hose attaching to the turbo inlet to allow better access to the original turbo muffler. Please note: This car is fitted with an AIRTEC Motorsport induction kit.

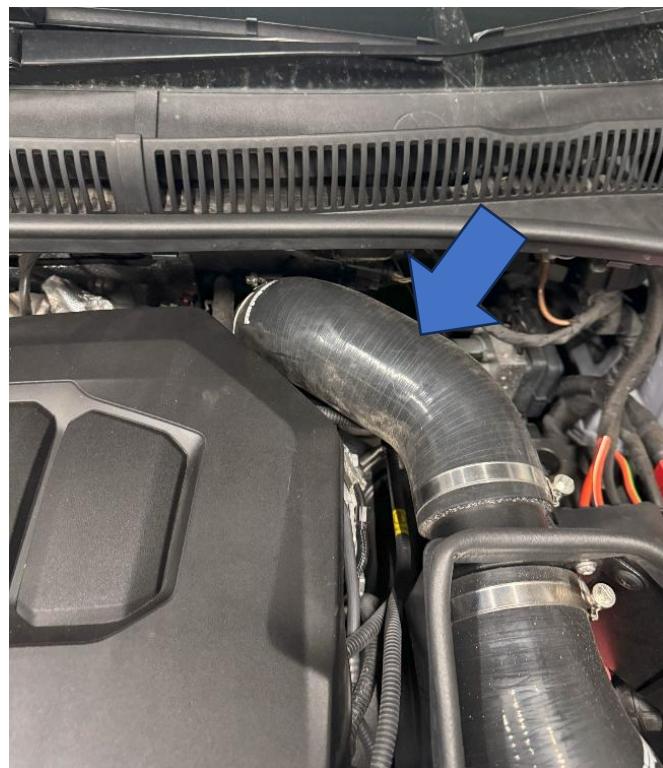


2. Remove the hose attached to the original turbo muffler by releasing the two jubilee clips.

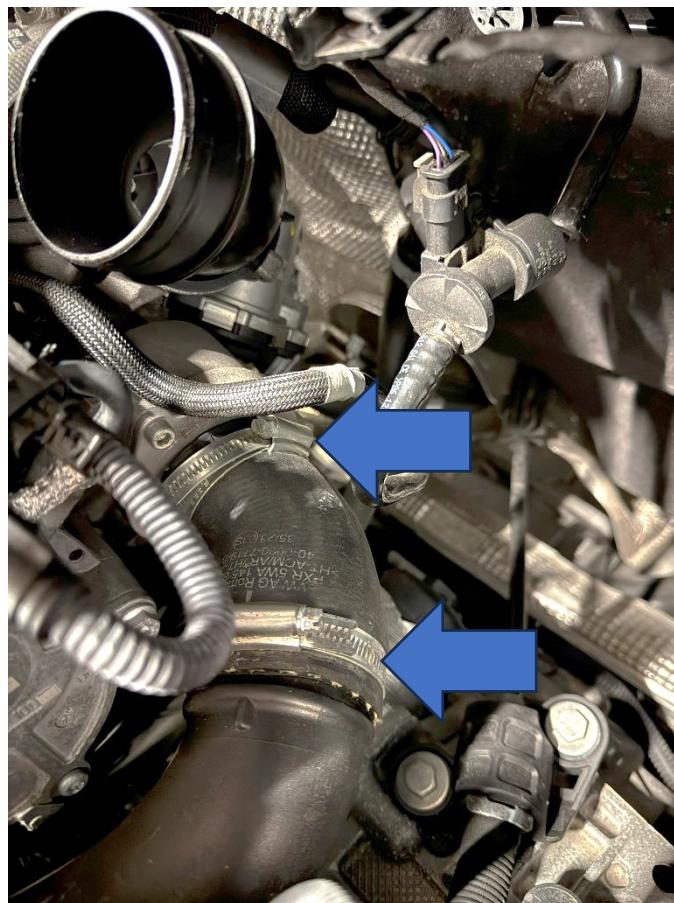

3. Now remove the three 5mm Allen Key bolts and the original muffler can be removed from the car.

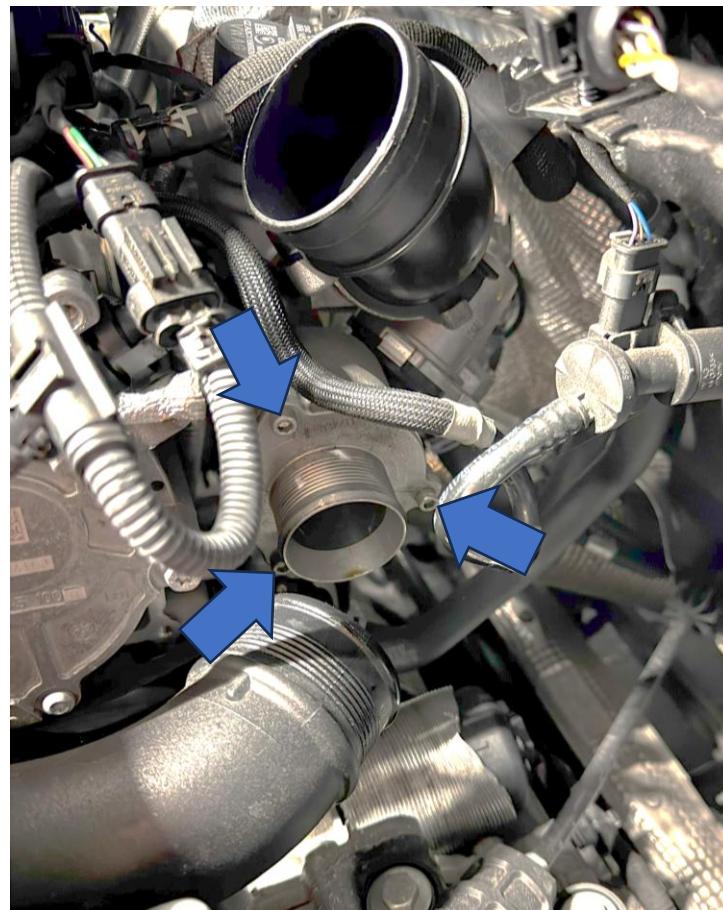

4. Before installing the new AIRTEC Motorsport muffler delete, check that the mating face is fully clean. Then offer it up and rotate until all three holes line up. You can then secure reusing the original bolts.

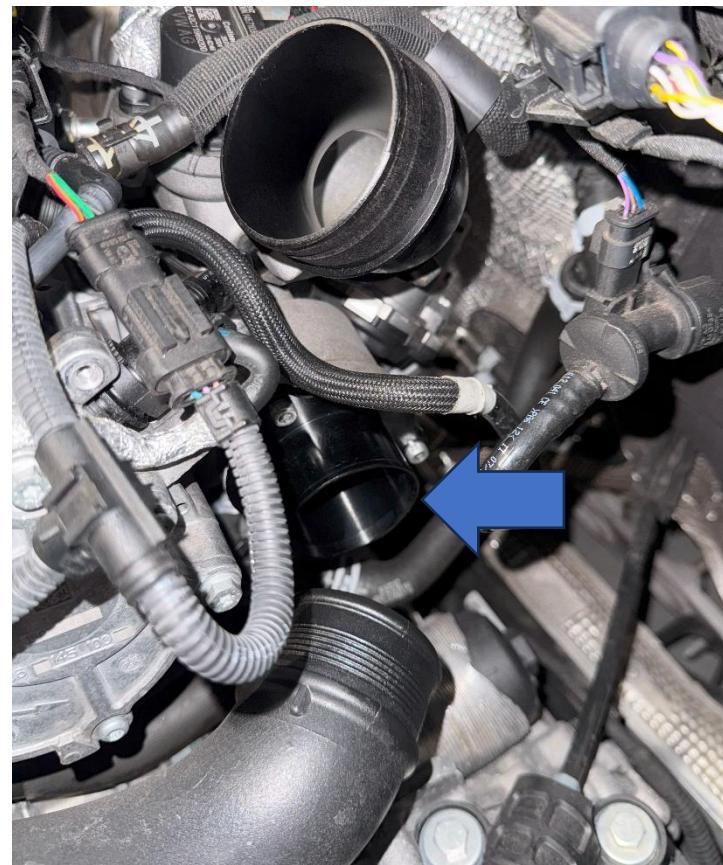

- Finally, install the supplied silicone hose with the jubilee clips provided in the kit. You can then reinstall the original hoses removed in Steps 1 and 2 to complete.

