

AIRTEC Fitting Instructions

Vehicle:	Ford Focus ST Mk4
Product:	Exhaust Tunnel Brace
Part number:	ATMSFO175



Kit Contents:

• 1x AIRTEC Motorsport Brace.	• 2x AIRTEC Motorsport Brace Spacers
• 4x AIRTEC Motorsport Shallow Bolts	


Tools Required:

• Ratchet and 13mm Socket	• 7mm Allen Key
---------------------------	-----------------

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. First locate the original exhaust tunnel brace and remove the four 13mm bolts securing it in place.
Please note: these bolts can be very rusty and are prone to snap.

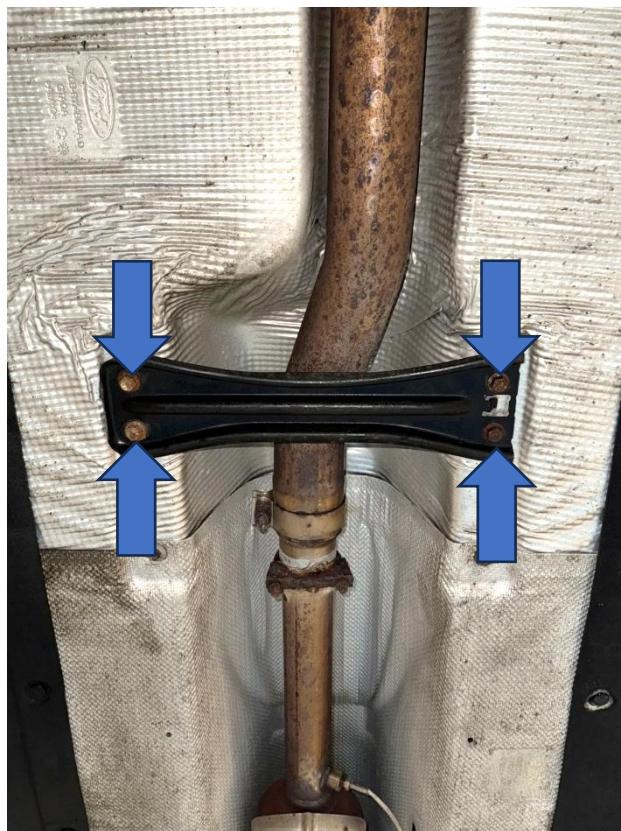

2. Now install the new AIRTEC Motorsport brace in the same location. If you have an aftermarket/larger exhaust system, you may need to the spacers supplied in the kit to allow clearance.



- Finally take a 7mm allen key and secure everything in place with the bolts provided.

