


AIRTEC **Fitting Instructions**

Vehicle:	BMW X3/4 M
Product:	Aluminium Under Tray
Part number:	ATMSBMW51

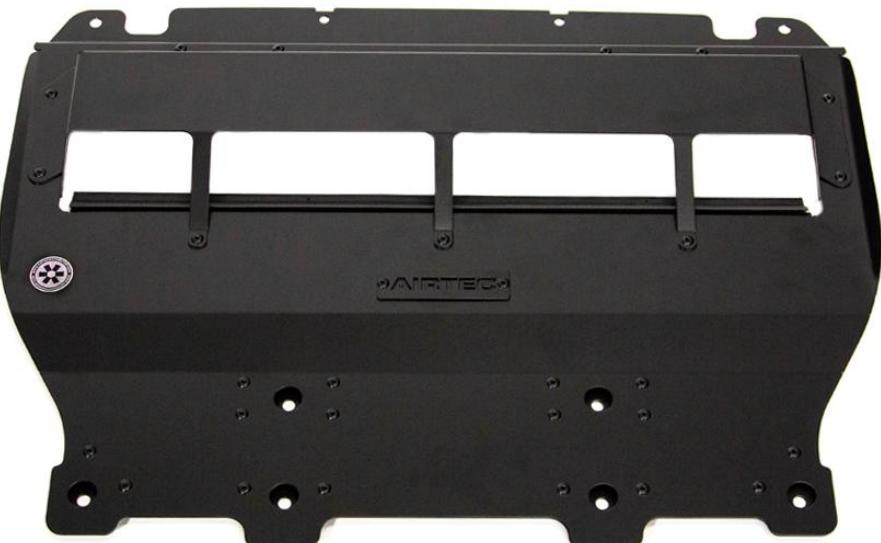

Kit Contents:

• 1x AIRTEC Motorsport Aluminium Undertray	• 1x Rubber Trim
--	------------------

Tools Required:

• Ratchet and 8mm Socket


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. With the car in the air, remove the original under tray and swap the small white plastic clips from the front over to the new AIRTEC Motorsport aluminium under tray, as shown.



2. Next, push the supplied rubber trim over the lip.

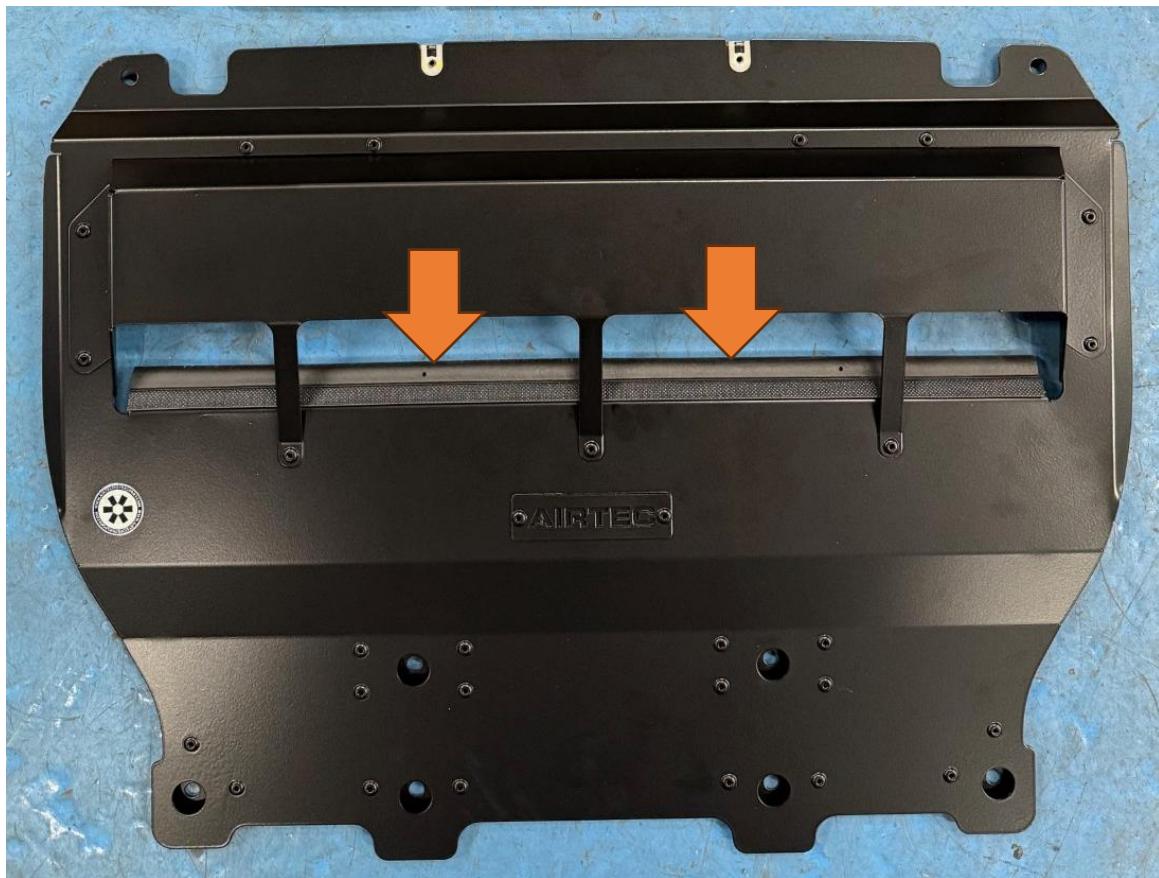

3. Finally, mount new aluminium under tray using all the original under tray fixings.

