

Vehicle:	Toyota Yaris GR (Gen 1&2)
Product:	Secondary Air Feed
Part number:	ATMYGR38

**Kit Contents:**

1x AIRTEC Motorsport Secondary Air Feed	1x M5x16mm Socket Head Bolt
1x M5 Rubber Rivnut	1x M5 Washer


Tools Required:

Trim Removal Tool	4mm Allen Key
-------------------	---------------


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. First, remove the left-hand side front bumper clip (blue arrow) and also locate the spare hole in the front panel, which will be used in the next step (orange arrow).

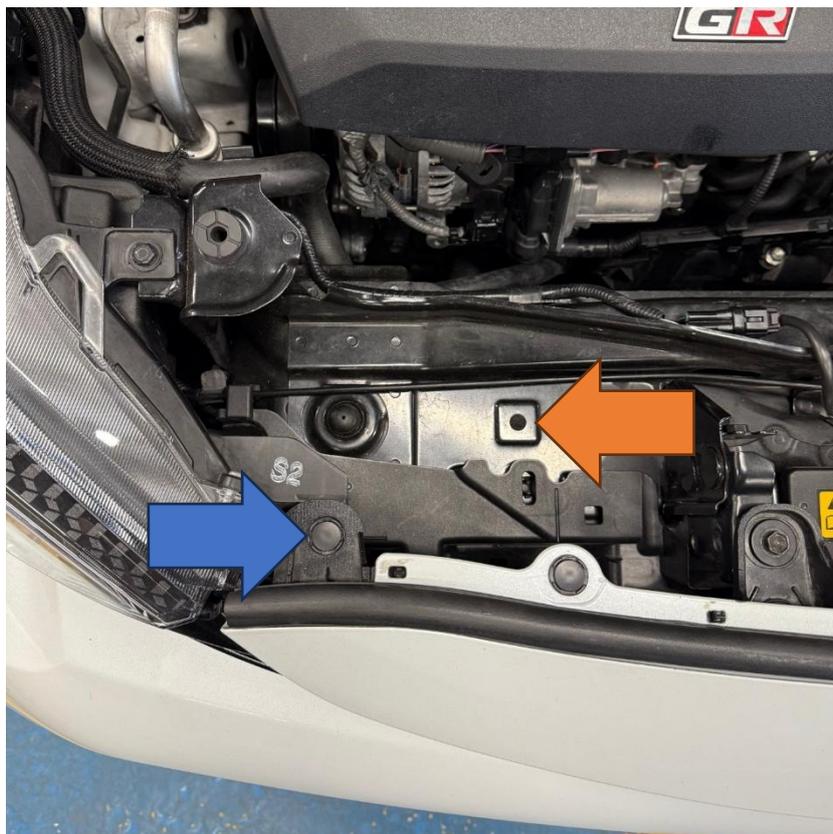

2. Next, secure the M5 bolt and washer into the Rubber rivnut provided in the kit through the air feed's lower bracket, as shown.

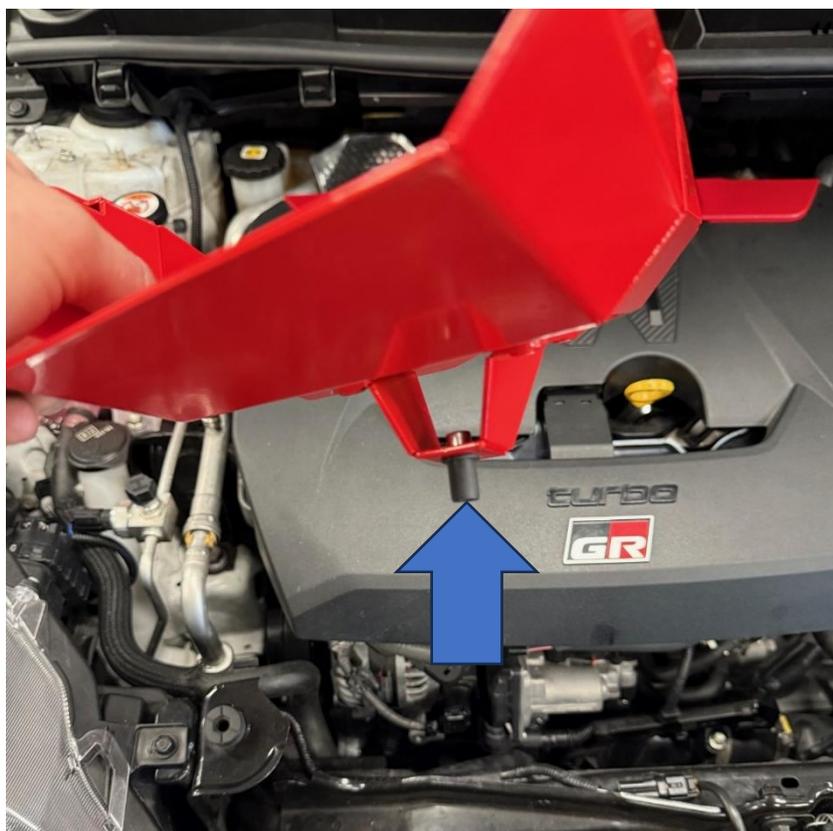

Finally, fit the air feed in position by locating the Rivnut into the spare hole from Step 1. Use a 4mm Allen Key to tighten the Rivnut until the scoop is secure. **Please note:** the rubber Rivnut requires minimal force when tightening.

Then reinsert the plastic push fitting on the left-hand side of the scoop.

