

Vehicle:	Toyota Yaris GR
Product:	Front Brake Ducts
Part number:	ATMSYGR36



Kit Contents:

2x	AIRTEC Motorsport Front Brake Ducts (Mirrored)
4x	31mm Phillips Screws
1x	Rubber RivNut
2x	M5x25mm Socket Head Bolts
2x	M5 Washers

Tools Required:

Jack	Phillips Screwdriver
Axle Stands	Sharp Scribe/Pen
21mm Socket	Drill and 9mm Drill Bit
Breaker Bar	4mm Allen Key
10mm Socket and Ratchet	

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. Start by removing both front wheels and then use axle stands to safely secure the car in the air.



2. Next remove the two 10mm screws in the front wheel arch securing the original brake duct in place.




3. Now, temporary install the AIRTEC Motorsport brake duct using the screws provided in the kit. Once in place, mark the location for last mounting hole to drill using a sharp scribe, as shown.

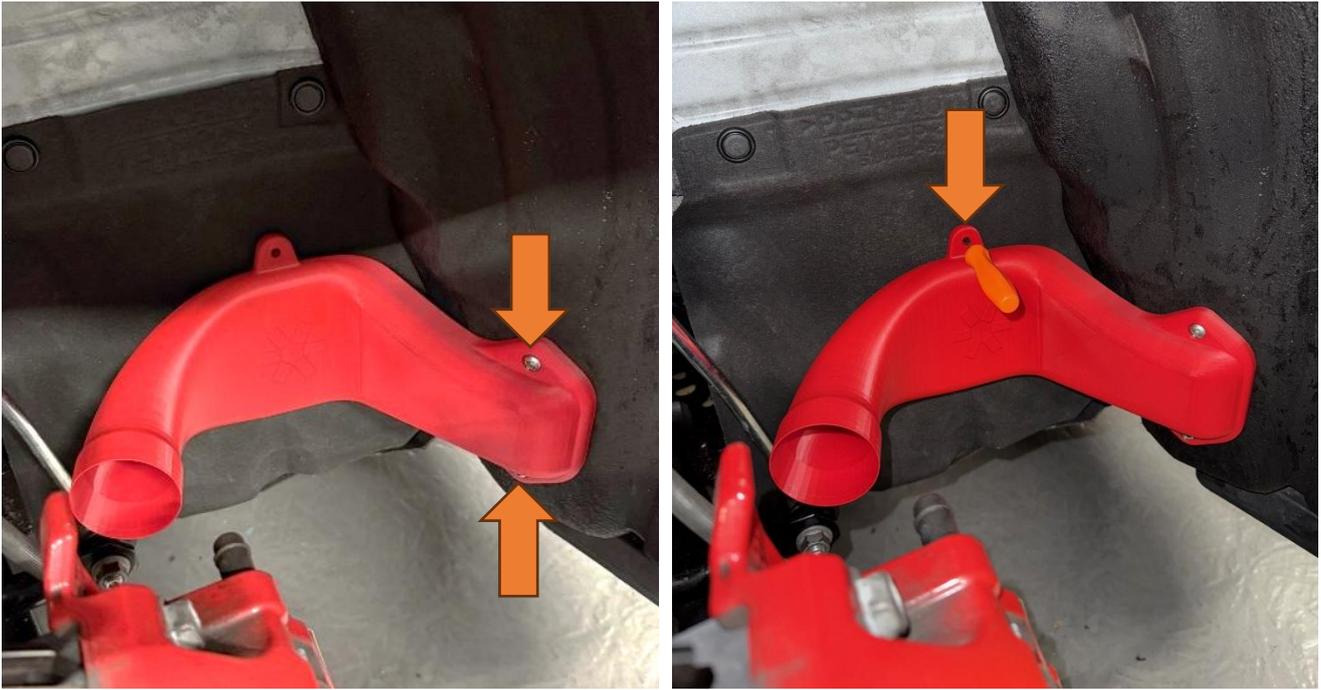

4. Next, remove the duct and drill out the marked location to 9.5mm and insert the rubber Rivnut supplied.



5. Reinstall the AIRTEC Motorsport brake duct using the M5 bolt and washer supplied in the Rivnut and the two remaining screws back into the original location. Tighten the M5 bolt with a 4mm Allen Key until the rubber Rivnut is secure behind the wheel arch panel.

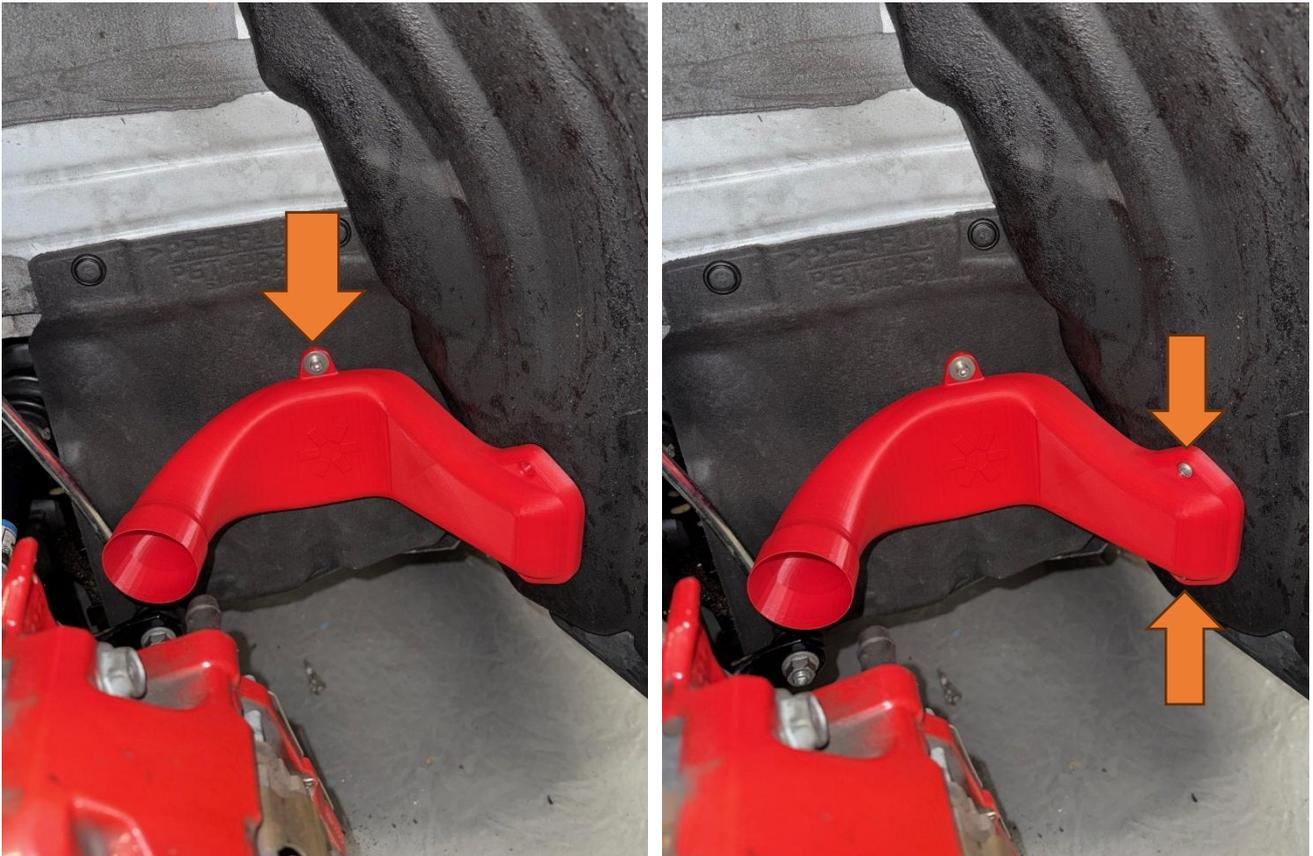

6. Finally make sure everything is tight and repeat the process for the other side of the vehicle.

