

AIRTEC Fitting Instructions

Vehicle:	Honda Civic Type R FK8
Product:	PCV Catch Can
Part number:	ATMSHON18



Kit Contents:

1x AIRTEC Motorsport Breather Catch Can	1x Pro Hoses Silicone Hose One
1x Breather Catch Can Mounting Bracket	1x Pro Hoses Silicone Hose 2
2x 10mm Breather Catch Can Take-Offs	2x Small Cable Ties
2x O-Rings	4x 18mm Jubilee Clips
4x M5x10mm Button Head Bolts	4x M5 Pan Washers


Tools Required:

<ul style="list-style-type: none">• Ratchet and Socket Set• Jubilee Clip Driver or Flat-Blade Screwdriver	<ul style="list-style-type: none">• Hose Clip Tool• Side Cutters
--	---

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. First, start by removing the Honda engine cover by undoing the five 10mm bolts, as shown.

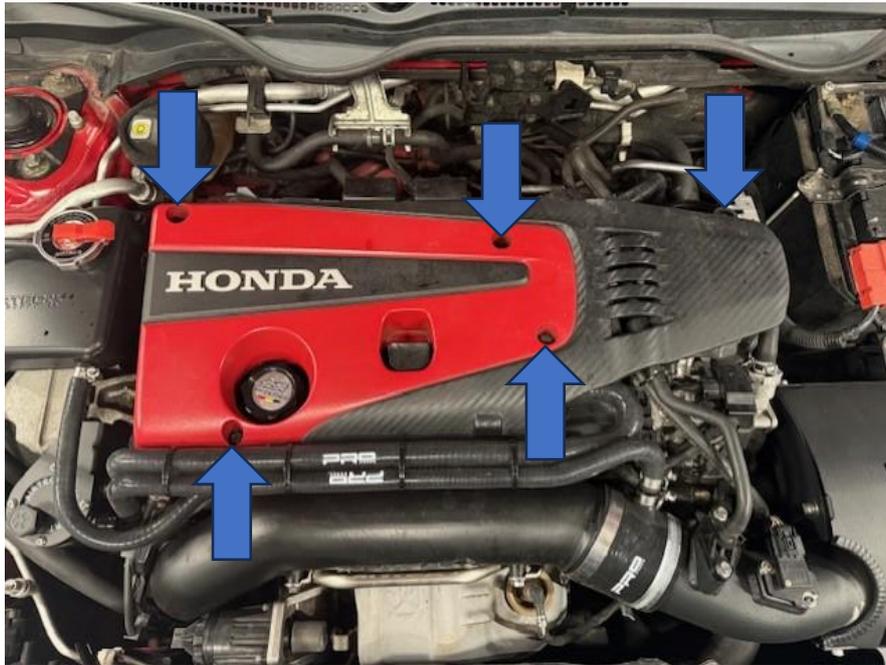



2. Next, locate the wiring loom on top of the engine and unclip to allow clearance. This will give you access to the top of the original breather hose, shown in the next step.



3. Now, move to the back of the engine locate the original breather hose. To release the hose, remove the spring clips at each end. Lifting the engine wiring loom will give you better access to the top hose clip.

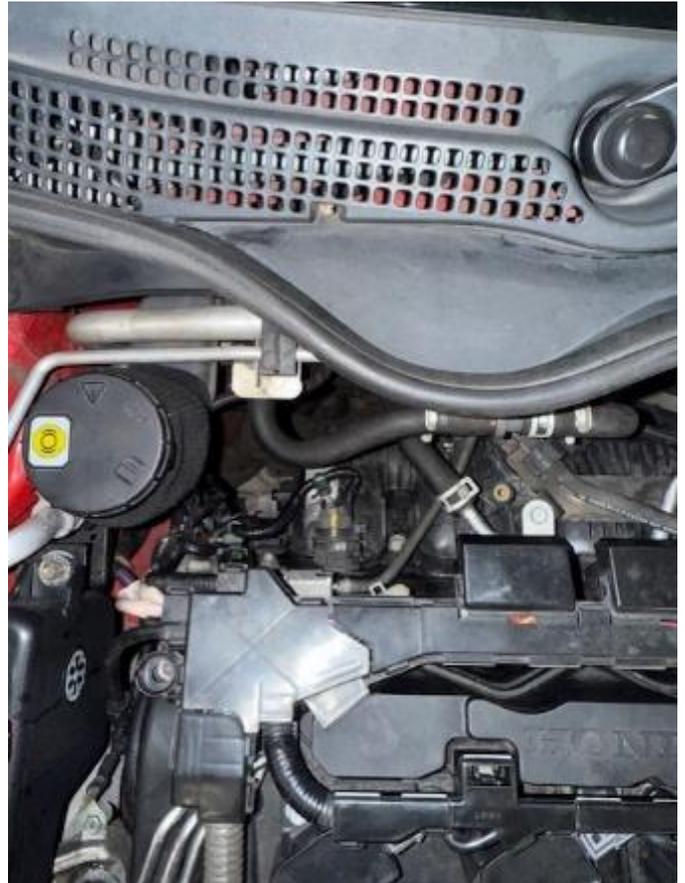



4. While at the back of the engine, locate the silver bracket, as shown. Remove it by unclipping the original hose and undoing the 10mm bolt securing it in place.

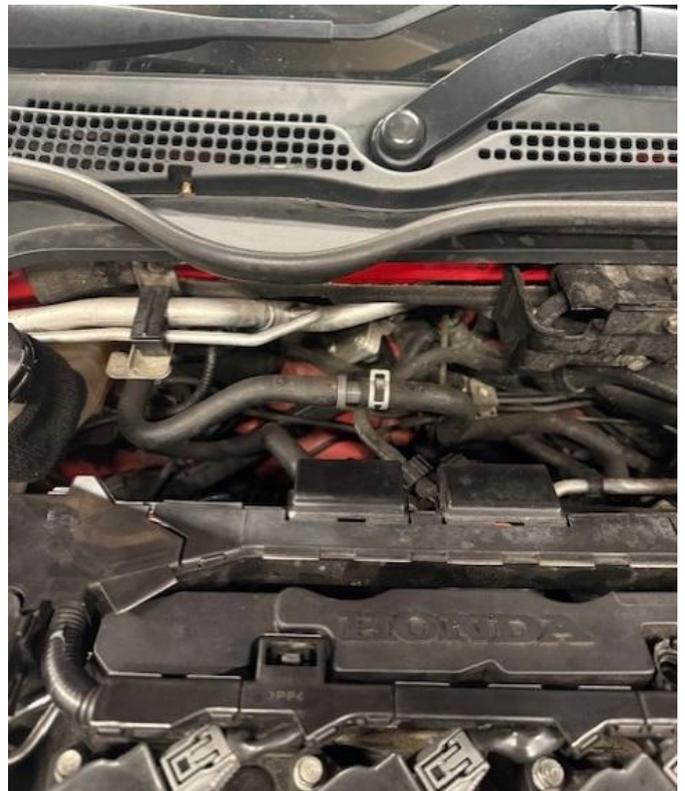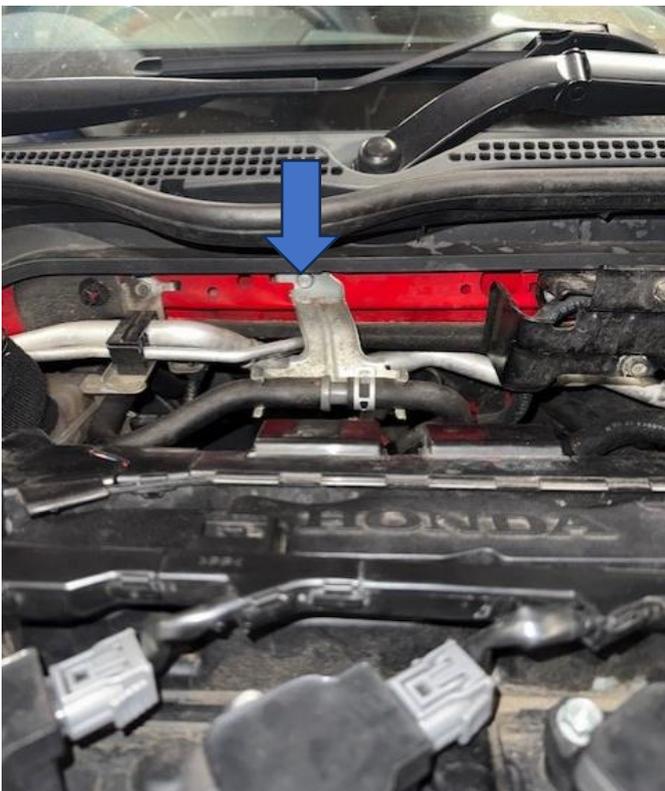


5. Secure the AIRTEC Motorsport mounting bracket to the bulkhead reusing the original bolt removed in Step 4. Locate the original hose over the bottom lip of the bracket, as shown.



6. Use the supplied bolts to mount the catch can under the bracket, as shown. Then fit the two breather take offs to the catch can with the O-Rings provided in the kit.

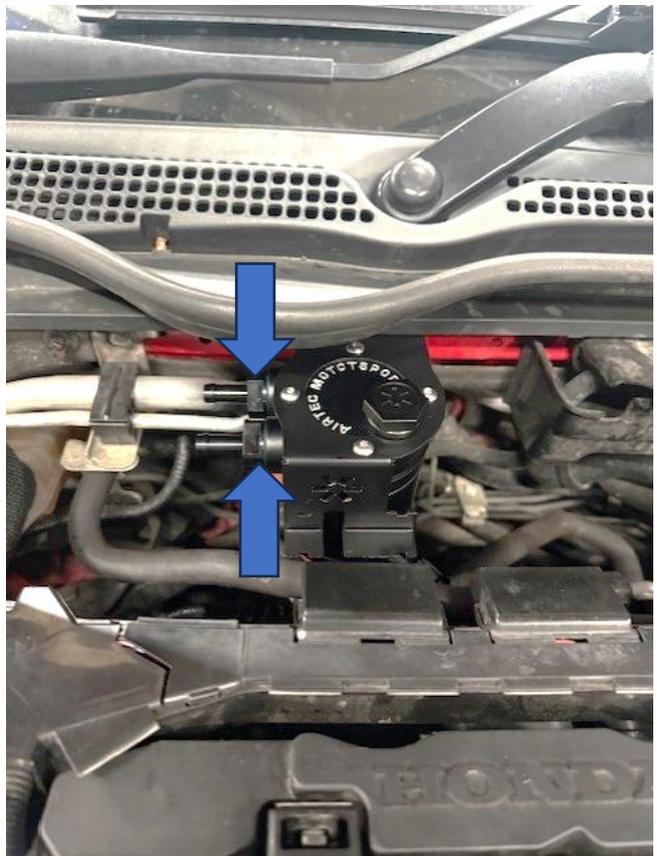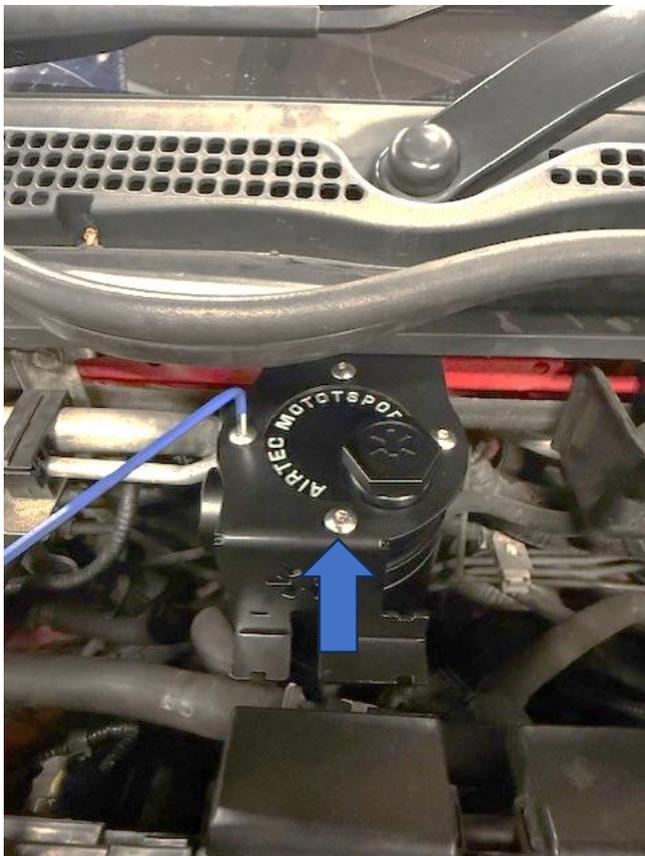


7. Connect the longer of the two supplied hoses and feed it down to the lower take-off disconnected in Step 3. Then connect the other end of the hose to the upper take-off on the catch can, as shown. Secure both ends with the supplied jubilee clips.

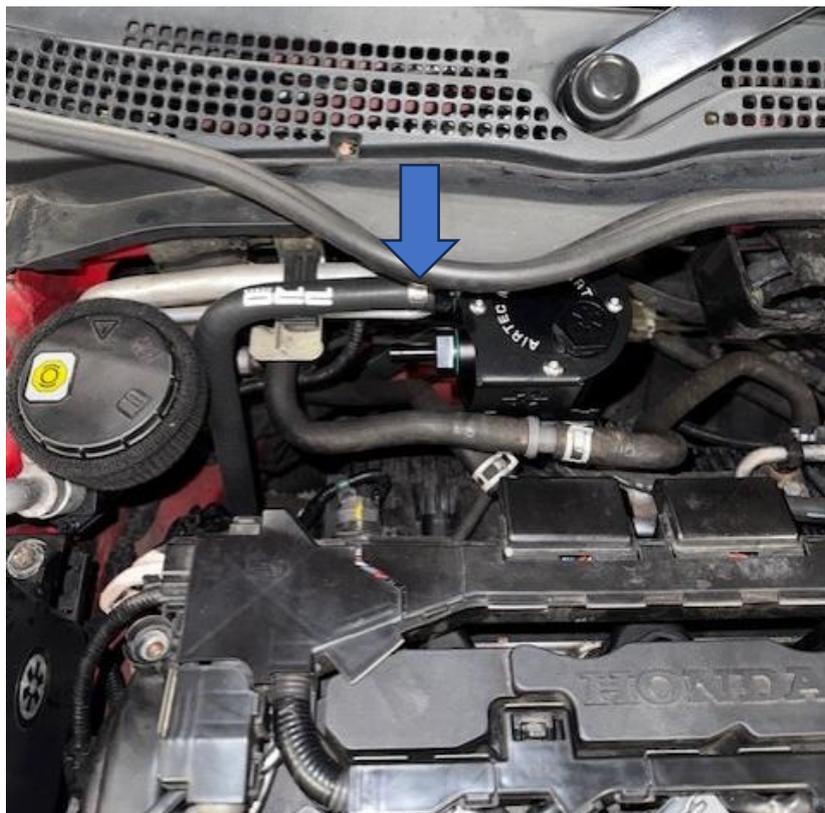

8. Connect the shorter hose to the top take-off disconnected in Step 3. Connect the other end of the hose to the remaining take-off on the catch can, as shown. Secure both ends with the supplied jubilee clips.



9. Secure the hose running across the front of the AIRTEC Motorsport bracket using the cable ties provided.

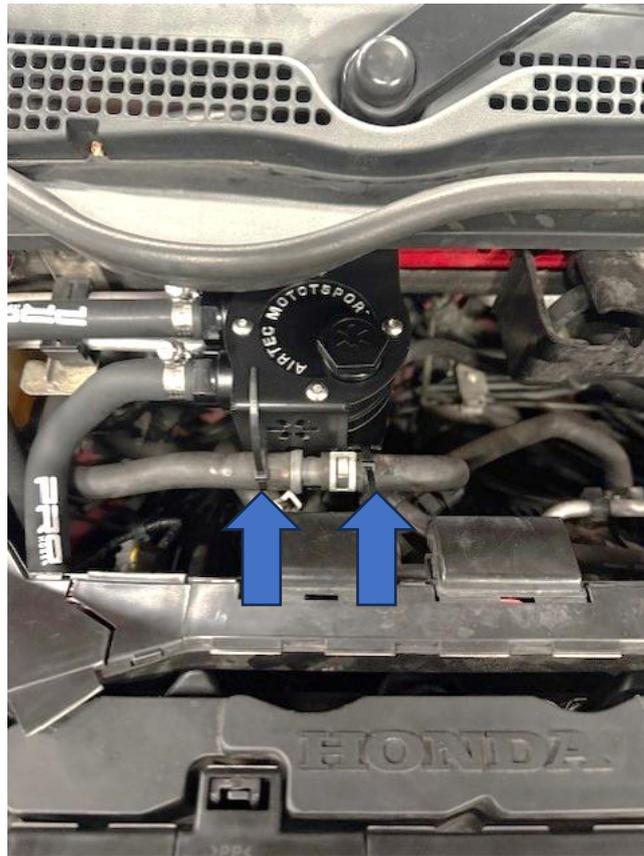

10. Finally, trim the cable tie tails neatly, check connections are all secure and reinstall the engine cover.

